


STEP 3 Steering servo assembly
轉向伺服機組裝

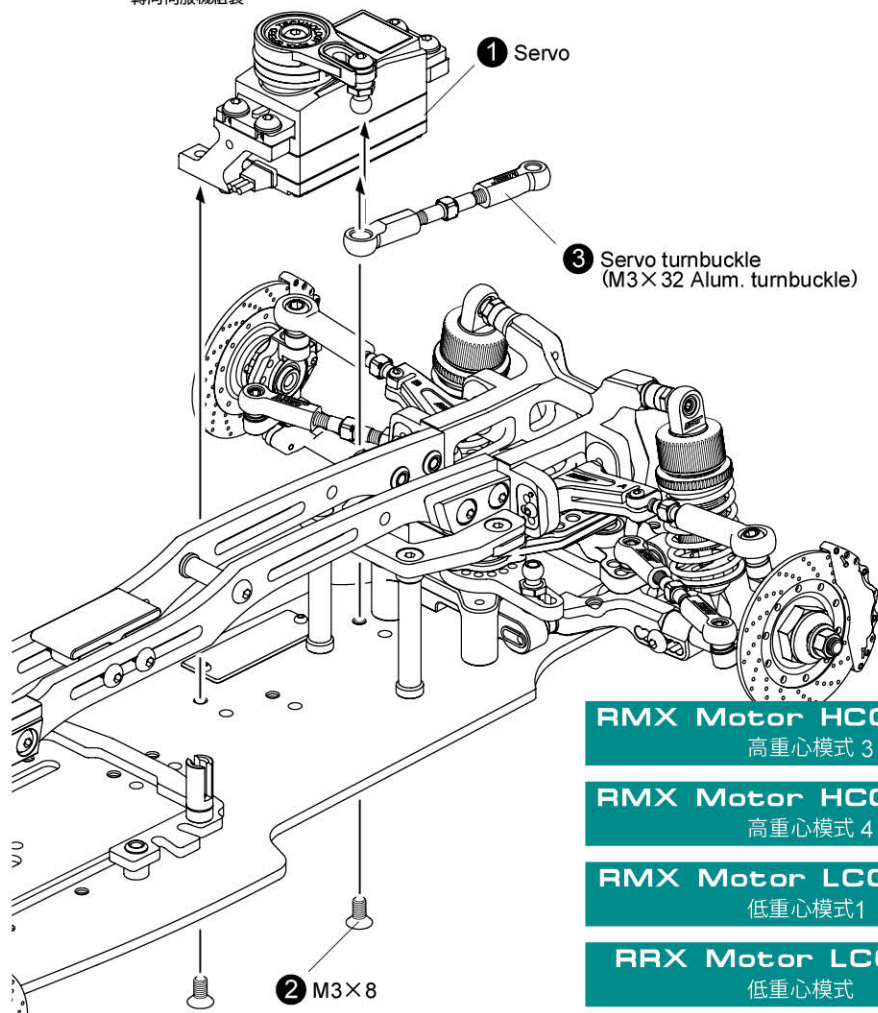


RMX Motor HCG Mode3
高重心模式 3

RMX Motor HCG Mode4
高重心模式 4


RMX Motor LCG Mode1
低重心模式 1

RRX Motor LCG Mode
低重心模式

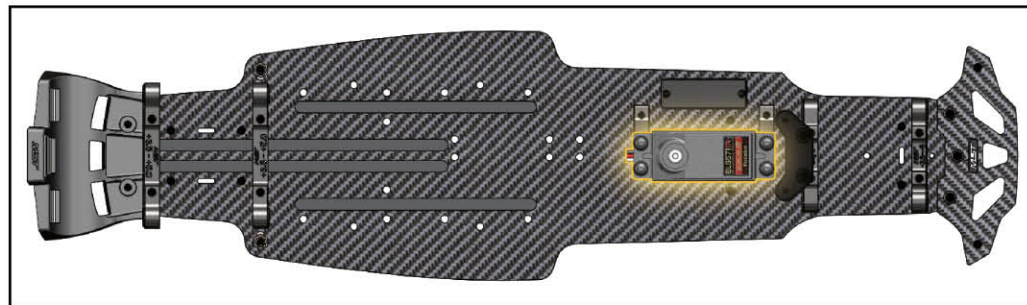


MOTOR MOUNT
馬達座

STEP 1 Attaching motor
安裝馬達

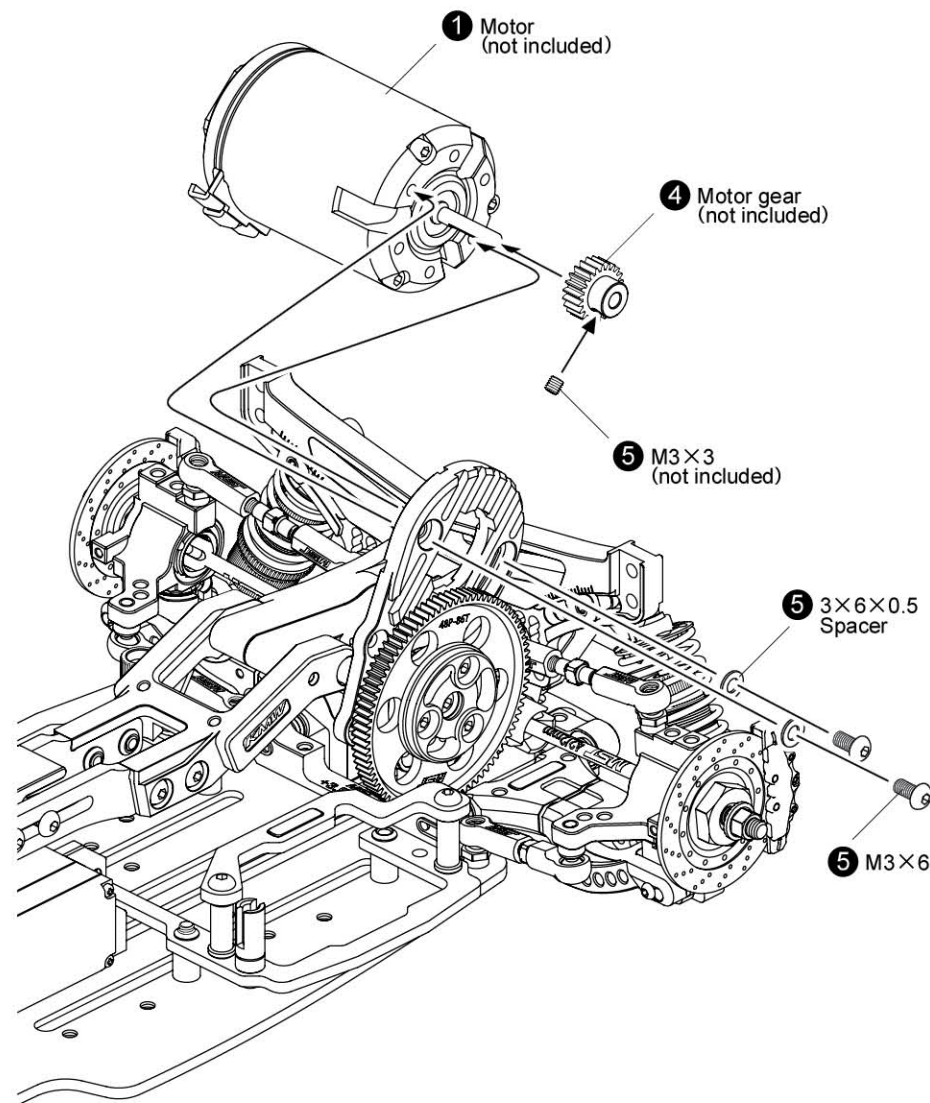

STEP 1 Attaching motor
安裝馬達

※ Centered low gravity
低重心

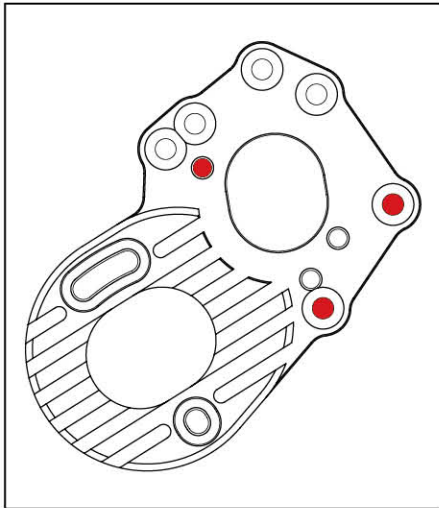


Low-gravity motor configuration GEAR RATIO (For 80T Spur Gear)	
21T	11.43
22T	10.91
23T	10.43
24T	10
25T	9.6
26T	9.23
27T	8.89
28T	8.57
29T	8.28
30T	8

● Screw locking position
螺絲鎖點



※ Rear-upper-gravity motor configuration
高重心馬達配置

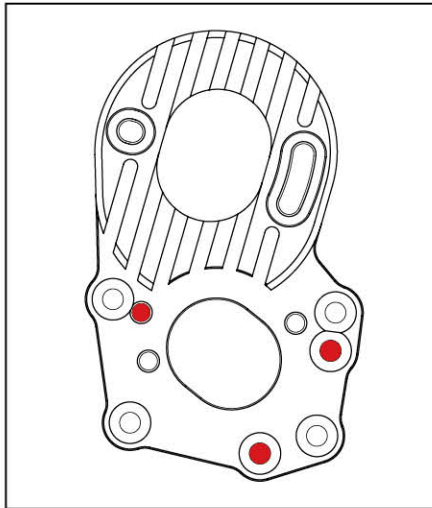


Upper-gravity motor configuration GEAR RATIO (For 80T Spur Gear)	
20T	12
21T	11.43
22T	10.91
23T	10.43
24T	10
25T	9.6
26T	9.23
27T	8.89
28T	8.57
29T	8.28
30T	8
31T	7.74

● Screw locking position
螺絲鎖點



※ Upper-gravity motor configuration
高重心馬達後移配置


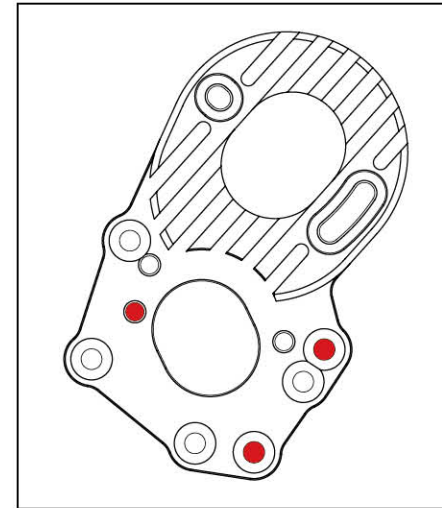


Rear-upper-gravity motor configuration GEAR RATIO (For 87T Spur Gear)	
20T	13.05
21T	12.43
22T	11.86
23T	11.35
24T	10.88
25T	10.44
26T	10.04
27T	9.67
28T	9.32
29T	9
30T	8.7
31T	8.42



● Screw locking position
螺絲鎖點



STEP 1 Attaching Battery 安裝電池

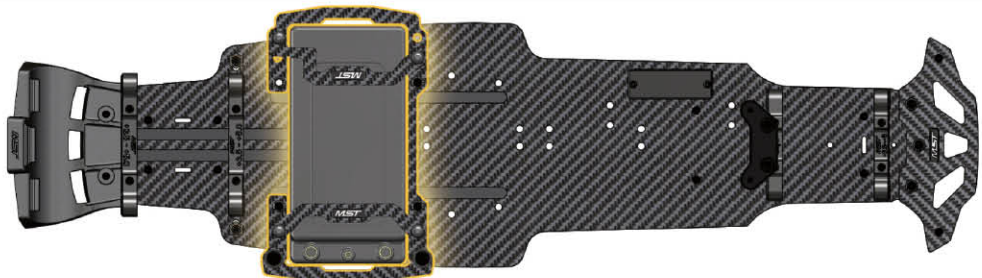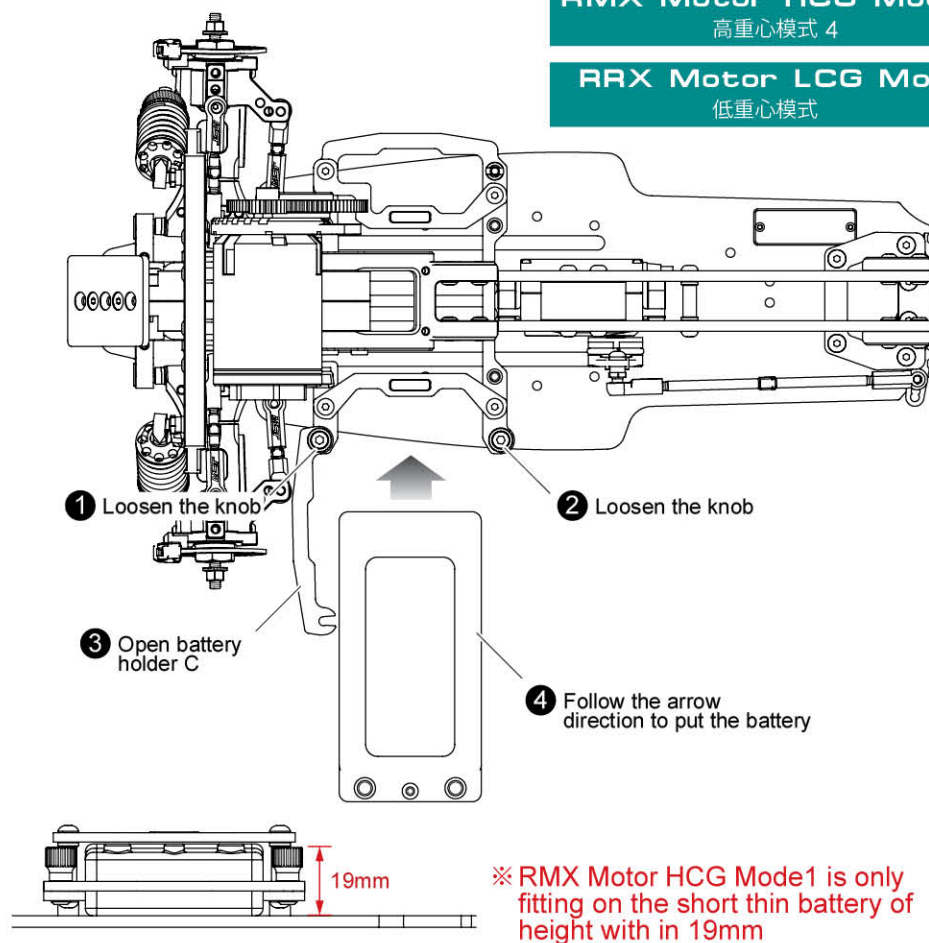


STEP 2 Attaching Battery 安裝電池


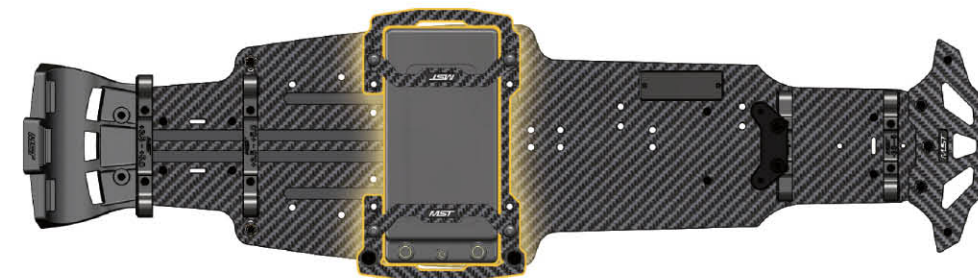
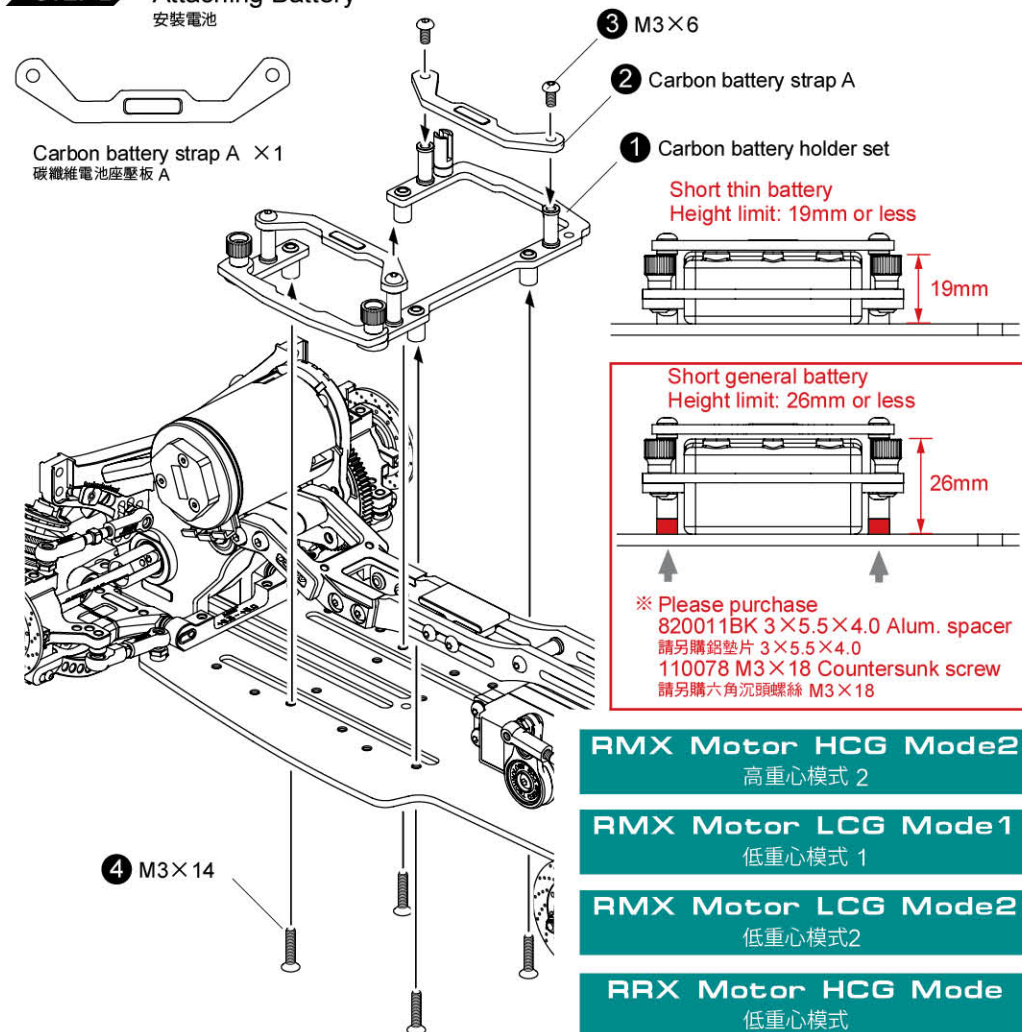









STEP 1 Attaching Vertical battery
安裝直式電池

RMX Motor HCG Mode3
高重心模式 3

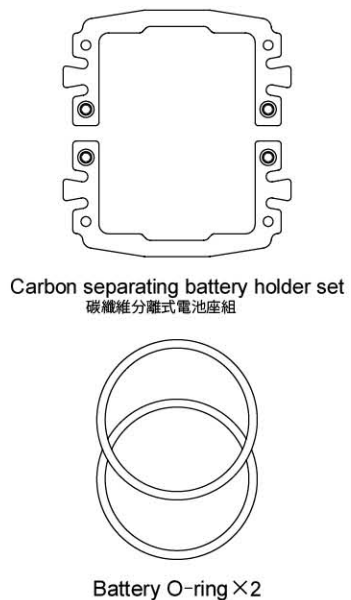


※ Please purchase
820011BK
3×5.5×4.0 Alum. spacer
請另購鋁墊片3×5.5×4.0

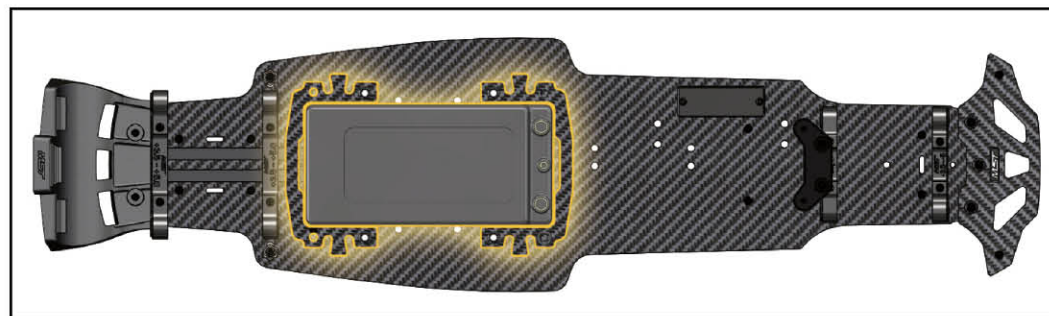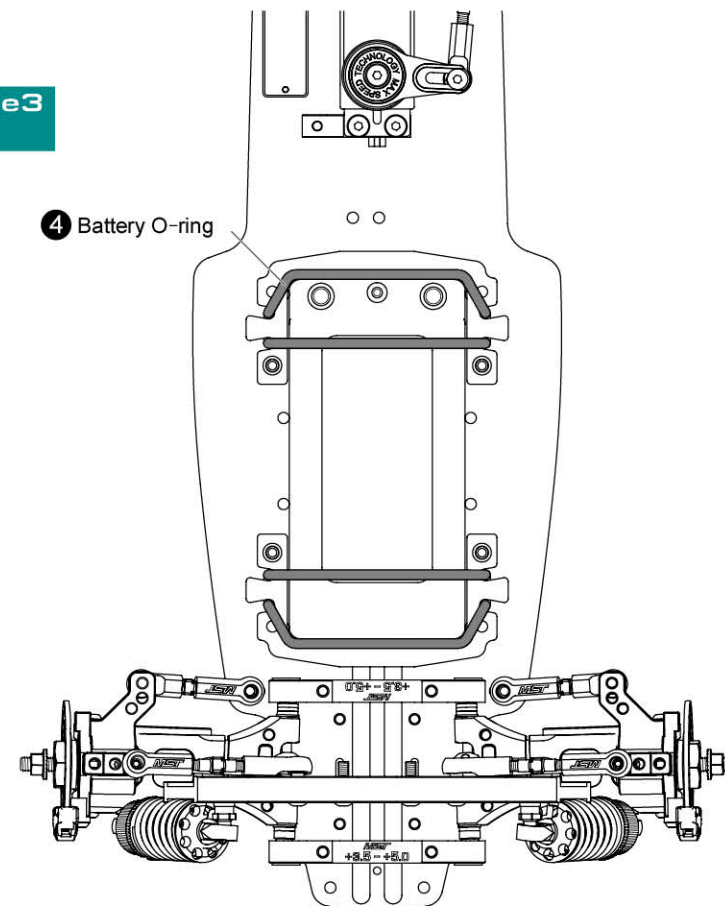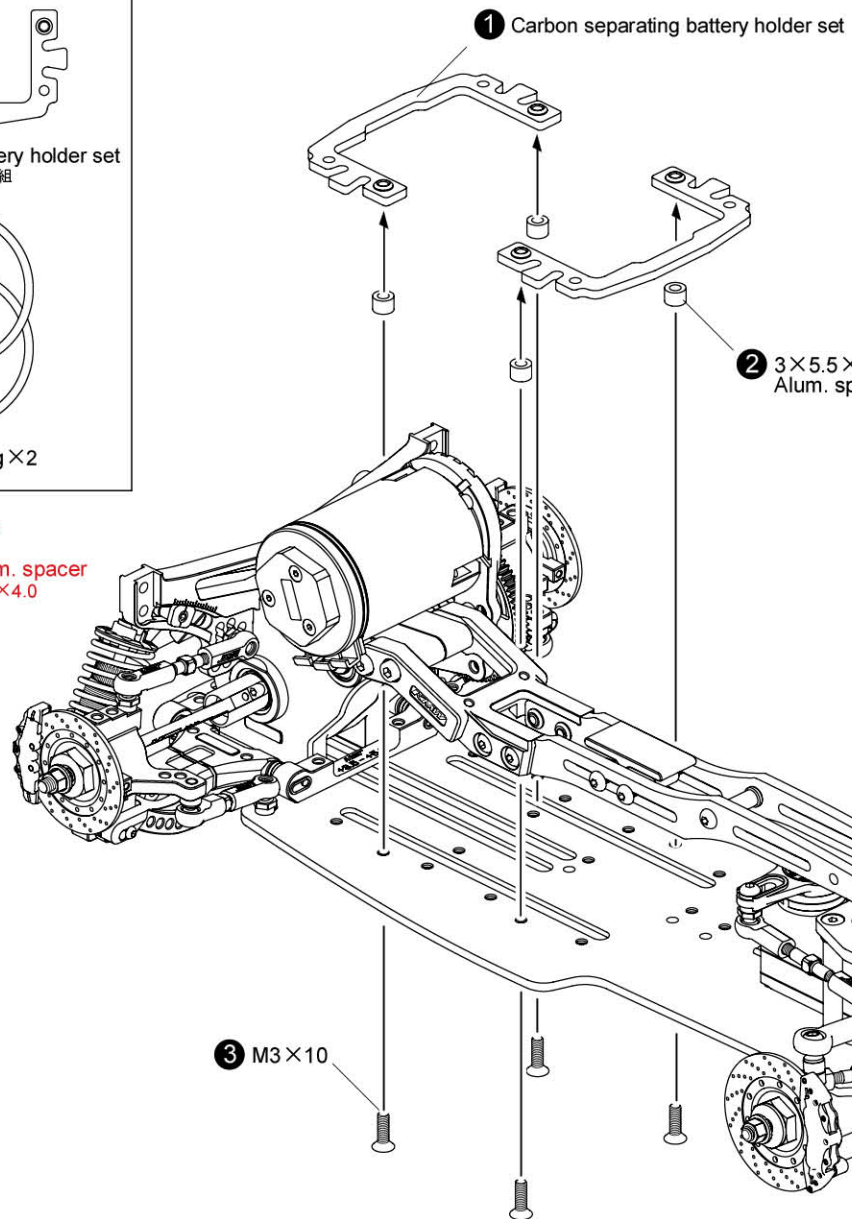

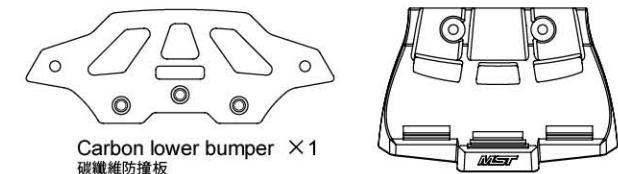


STEP 1 Attaching body mounts

安裝車殼固定座

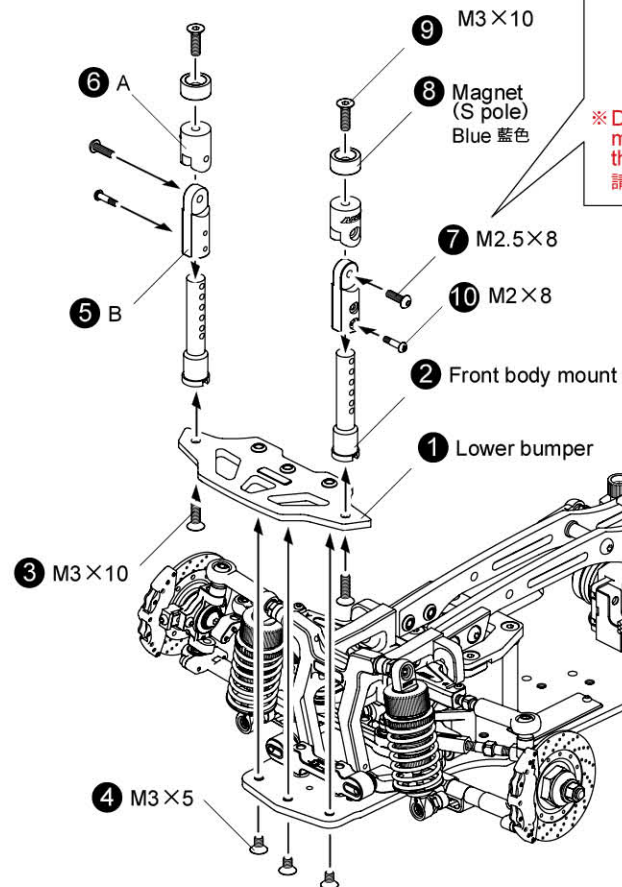



※ Do not lock it! The cap must be able to swing to the left and right freely.
請勿鎖緊! 左右須能自由擺動。

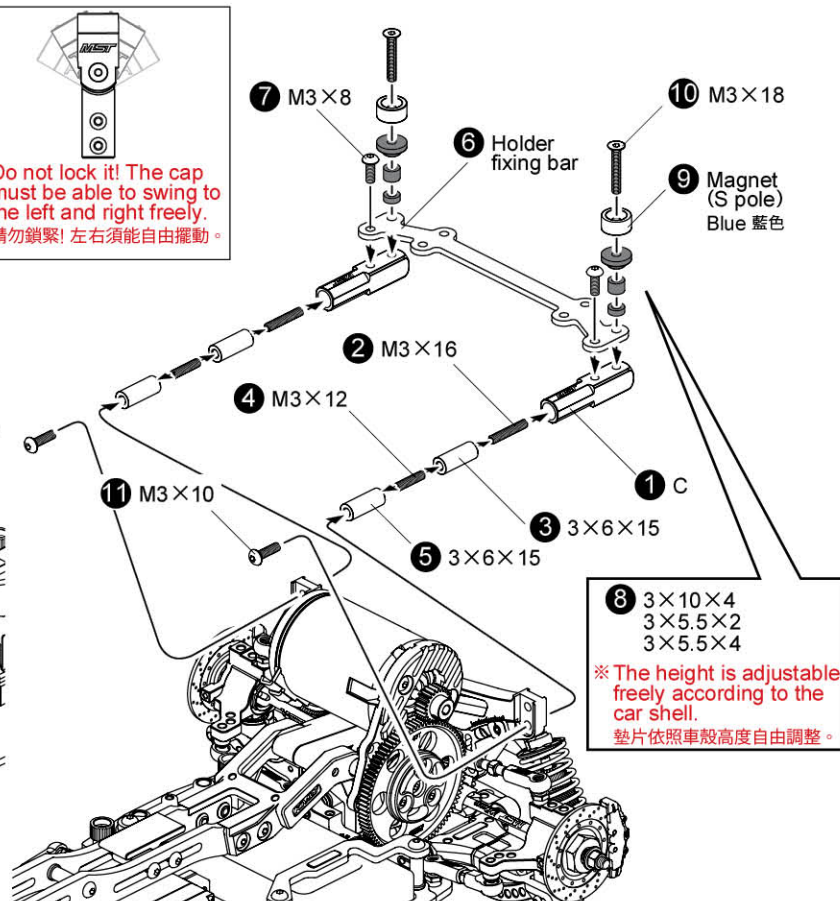

STEP 2 Fix the upper magnet holder

固定上磁鐵固定座

F/R

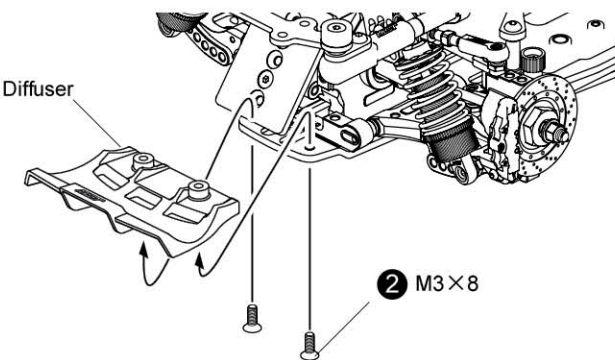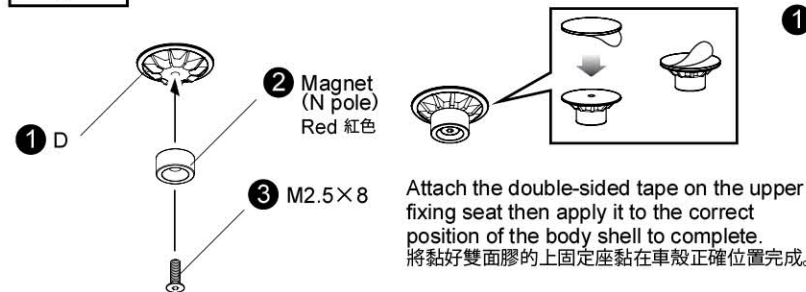


STEP 1 Attaching ESC、Receiver、Gyro
安裝電變、接收器、陀螺儀


※ Please purchase
841013 LSD X Gyro.
請另購 841013 LSD X 陀螺儀。

STEP 2 Attaching wheels
安裝輪胎


※ NOT including.
Please refer to MST website
for the wheel& tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]

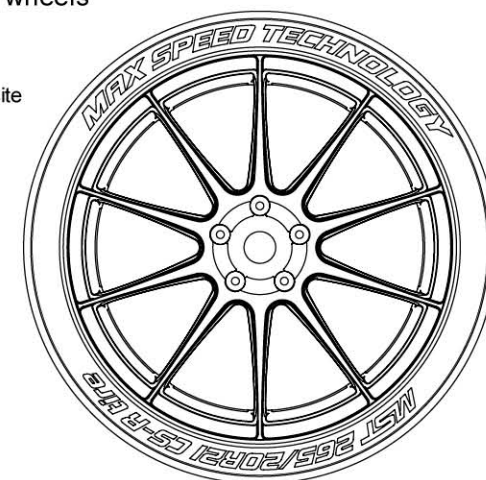

※ Please remove the spacer for wheel
offset above +7 (including +7)
Off set +7以上輪框(含+7) 請移除此墊片

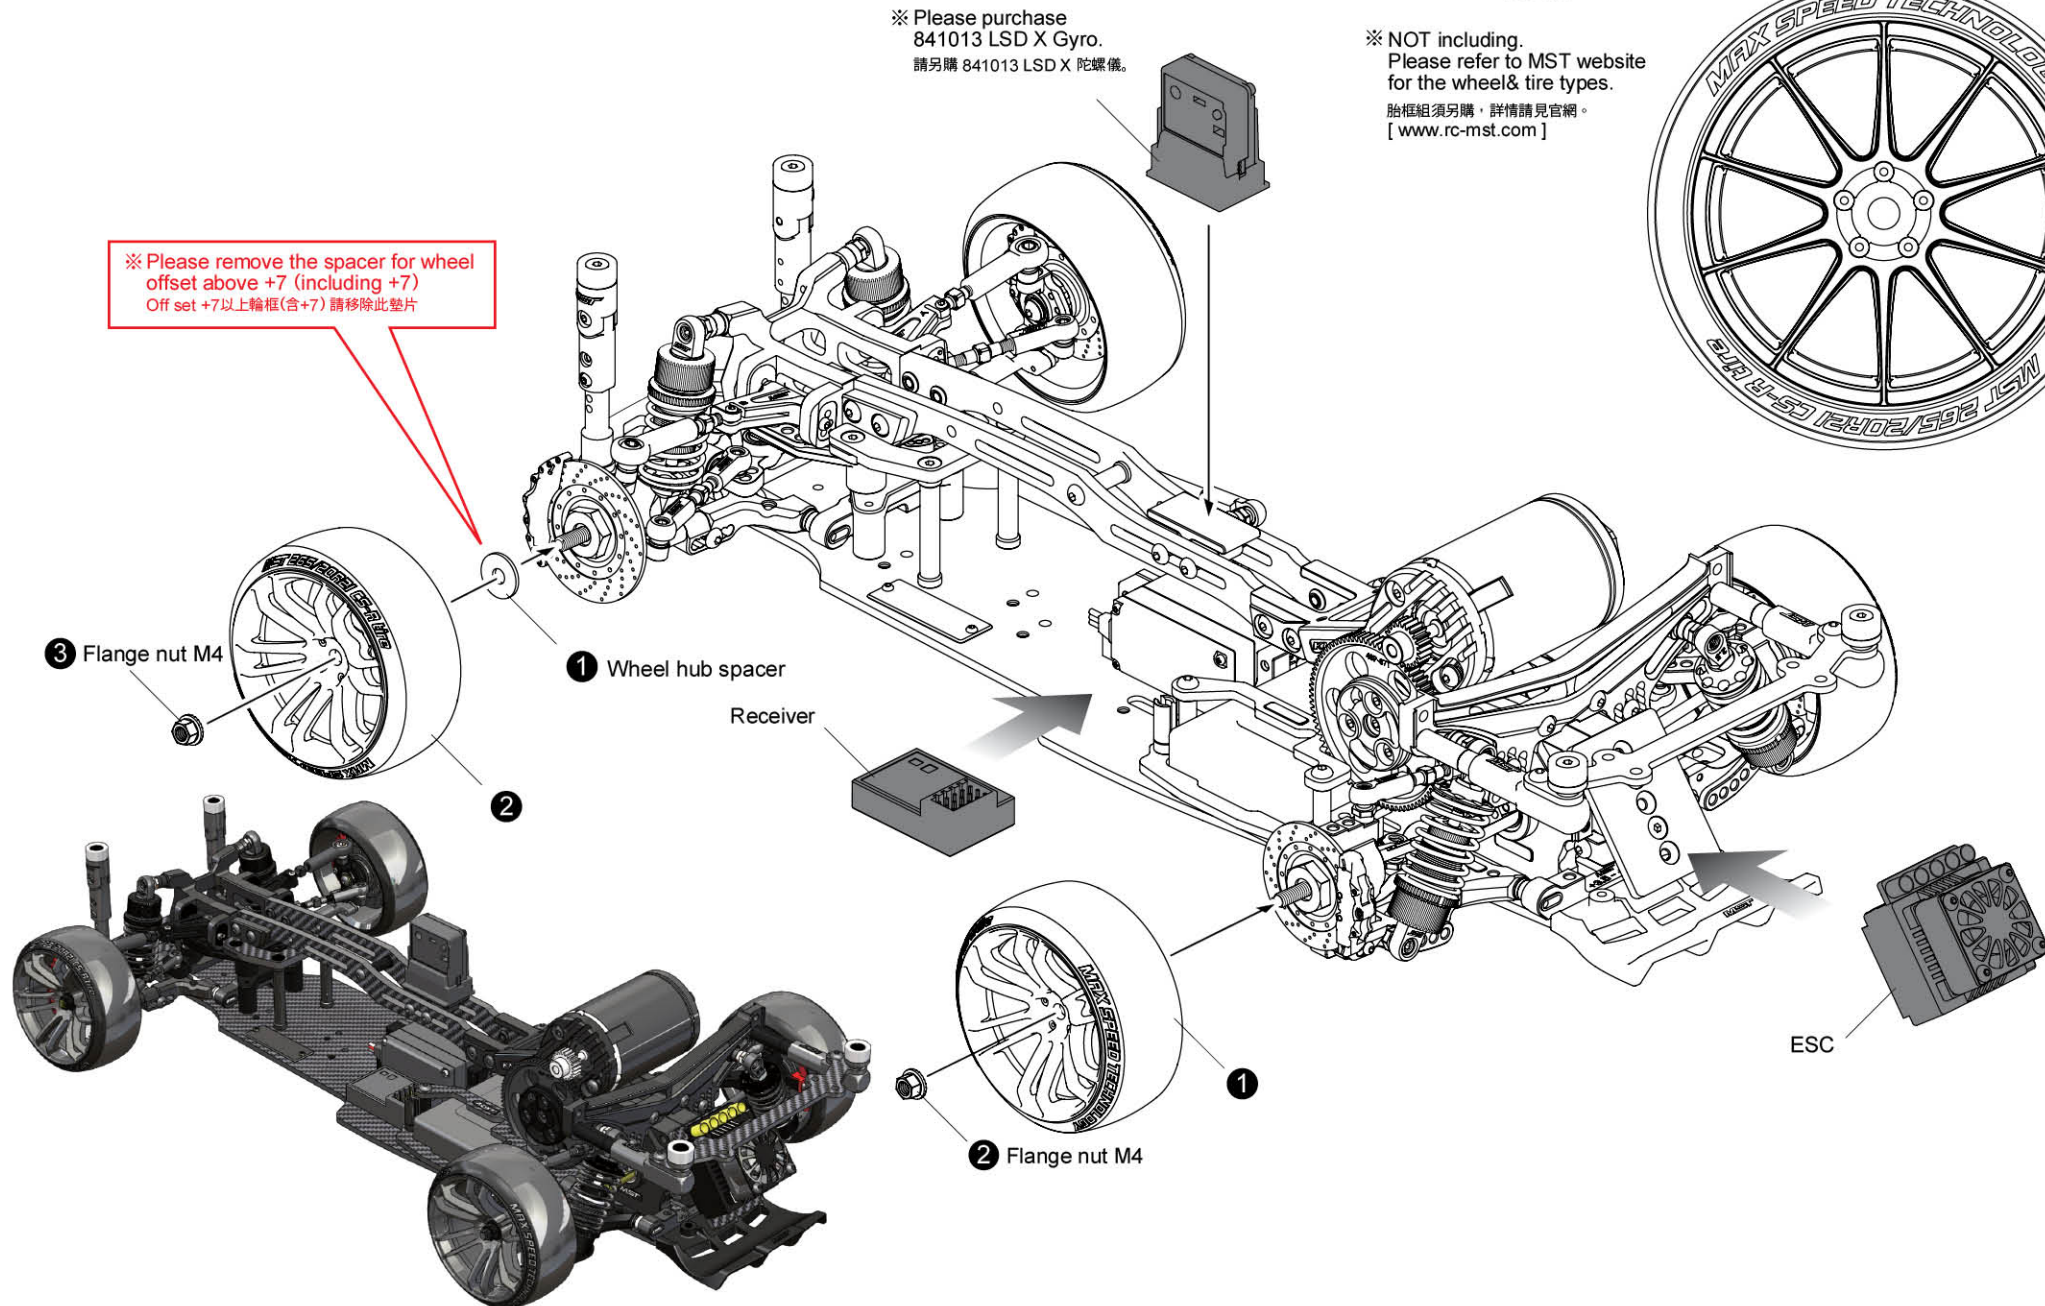




STEP 1 Attaching RRX drive system
安裝 RRX 驅動系統

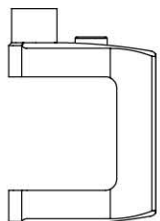

Bag T

Duck tail ×1
鴨尾

※ Please purchase 110100 Cap screw
M3X30.
請另購 110010 M3×30 螺絲

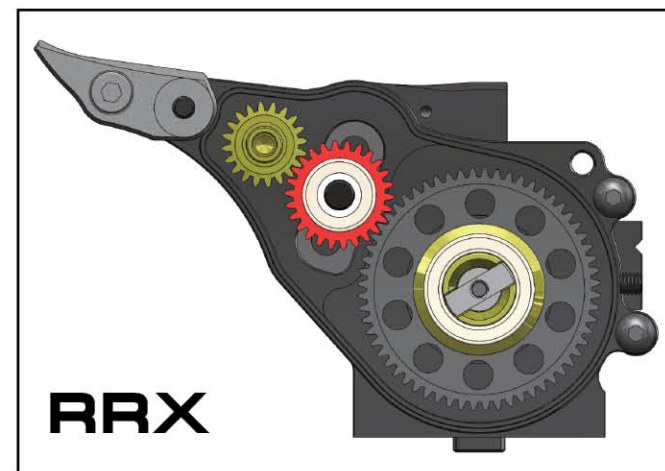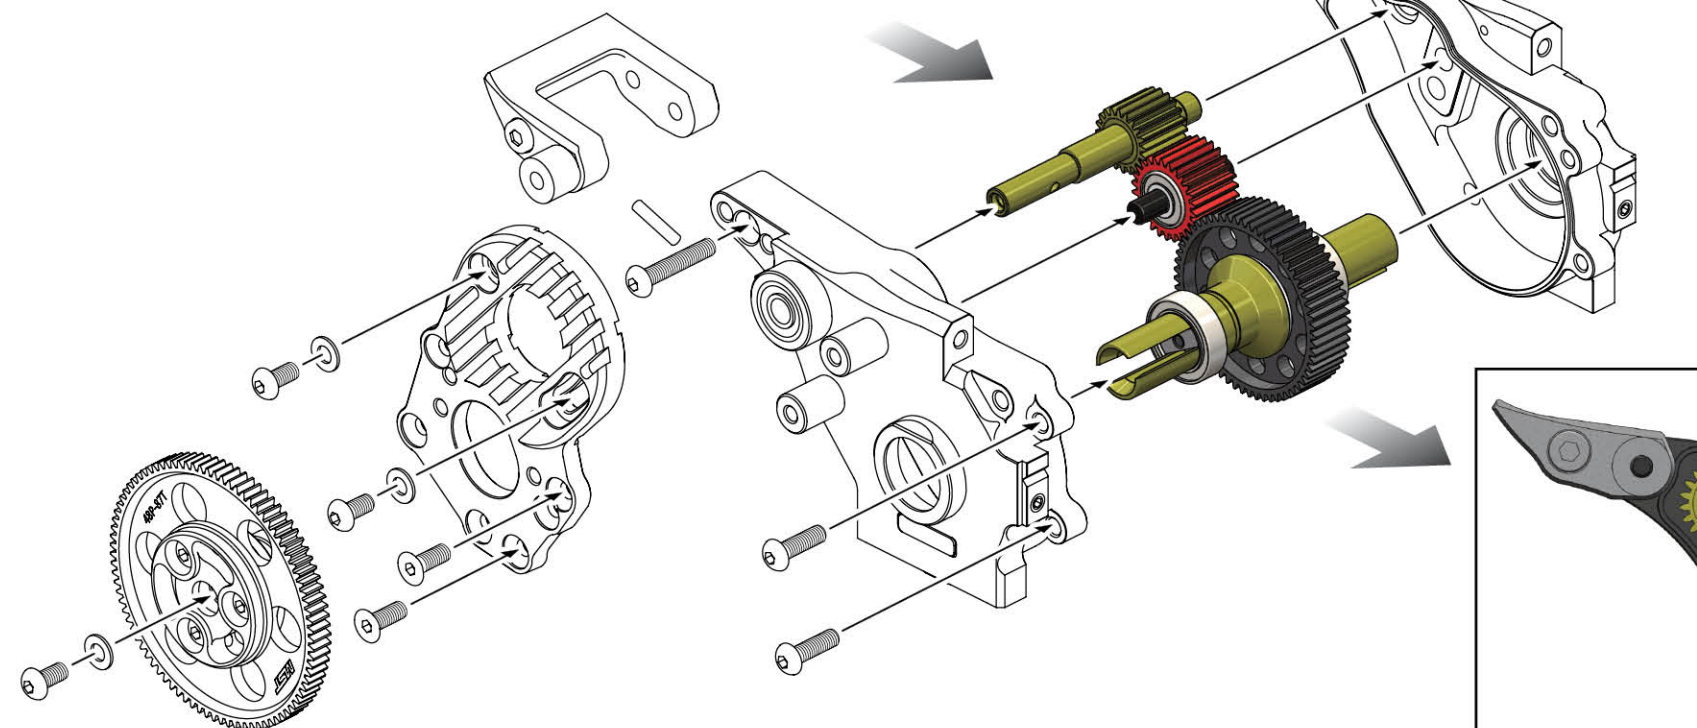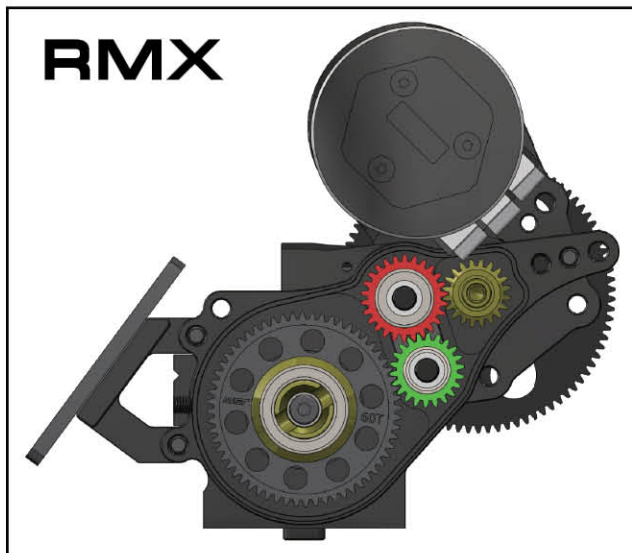


STEP 1 Attaching damper stay set
安裝後避震架

※ Please purchase
請另購

210593 Post 11.5
11.5支柱

110008 Set screw M3X25
M3×25 螺絲

110093 Nut M3
M3 螺帽

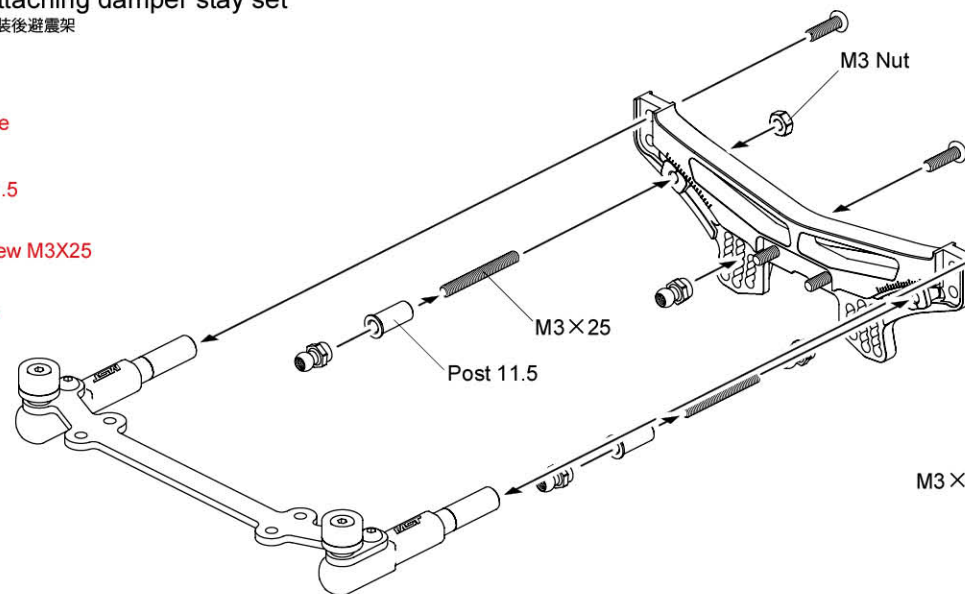**STEP 2** Attaching drive system
安裝驅動系統


OPTION PARTS

210602BK
RRX 2.0 Alum. rear connector(black)

※ Please purchase
請另購


110026 Set screw M3X10
M3×10 螺絲

110089 Set screw M3X30
M3×30 螺絲

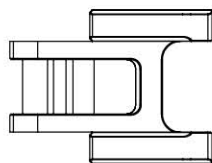

RRX Connector ×1
RRX 後至連結架

Bag T

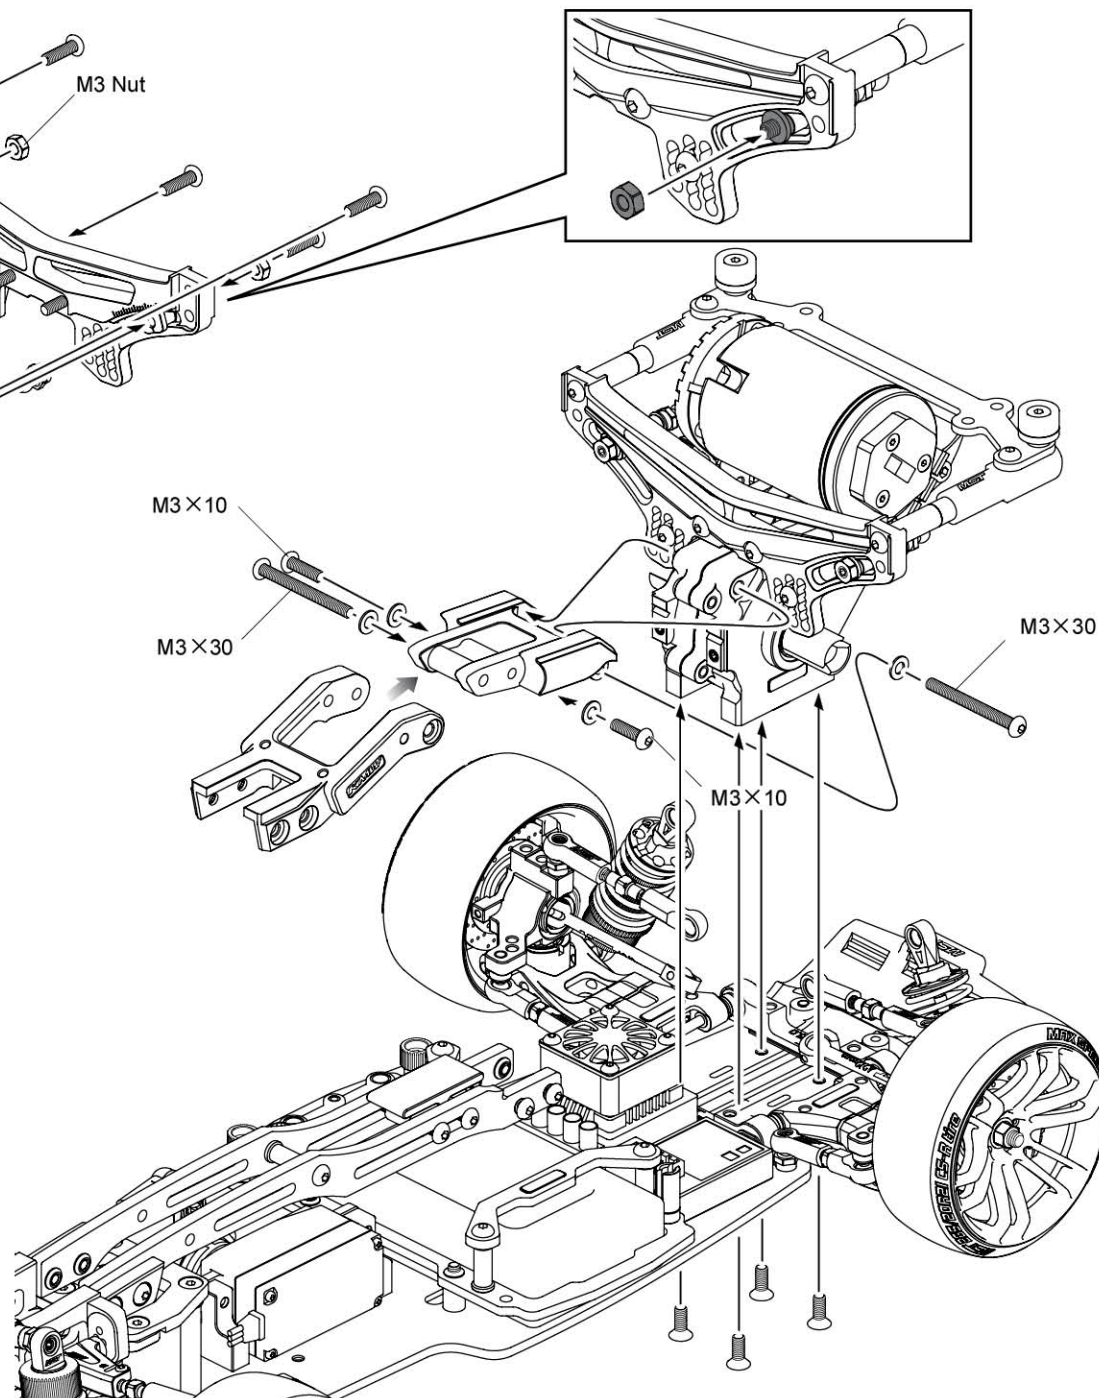

1 TRAIL ADJUSTMENT

Trail 調整


Follow the figure to assemble the trail for 0 / 0.75 / 1.5. The greater number is for the longer trail distance.
如圖依照需求選擇拖曳座0 / 0.75 / 1.5安裝，數字越大代表拖曳距越大。



2 KINGPIN STEERING EXTENT ADJUSTMENT



大王銷轉向變化調整

Follow the figure to install the kingpin position for demanded steering extent.
如圖依照轉向變化需求選擇大王銷球頭安裝位置。

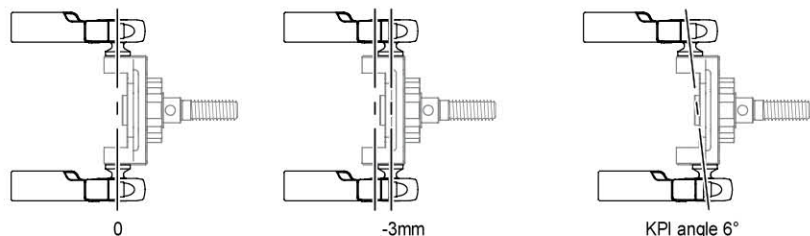

3 ACKERMANN CHANGES ADJUSTMENT

阿克曼角變化調整

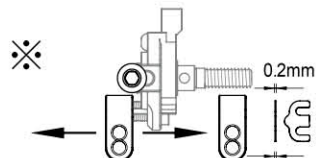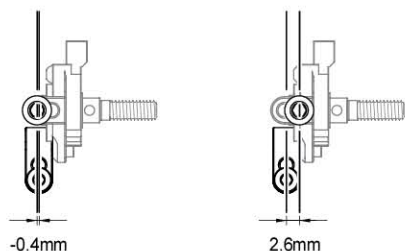

1. Install the special Ackerman spacer to adjust the offset, one for 0.2mm offset.
安裝專用阿克曼墊片調整偏移量，一片偏移量為0.2mm。
2. To adjust in the left arrow direction for bigger Ackermann angle.
往箭頭左邊方向調整阿克曼角越大。
3. To adjust in the right arrow direction for smaller Ackermann angle.
往箭頭右邊方向調整阿克曼角越小。


4 ACKMAN LOCK POINT HEIGHT ADJUSTMENT

阿克曼鎖點高低調整




STEP 1 Adjust the arm hingness

擺臂高度調整

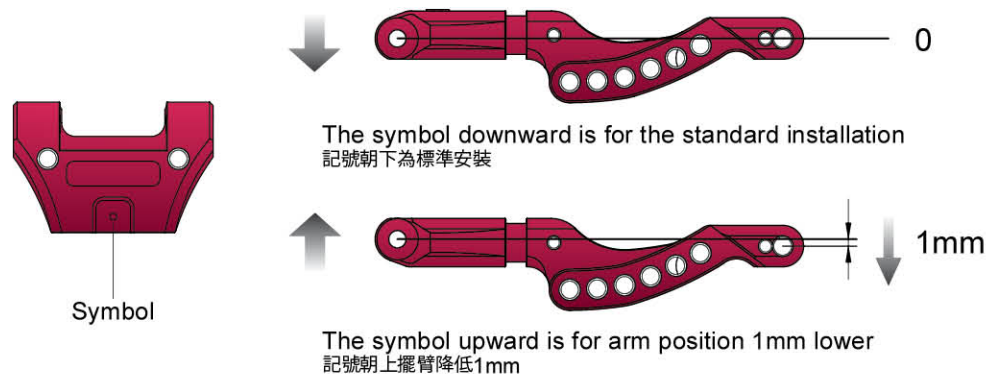


STEP 2 Adjust the arm length

擺臂長度調整

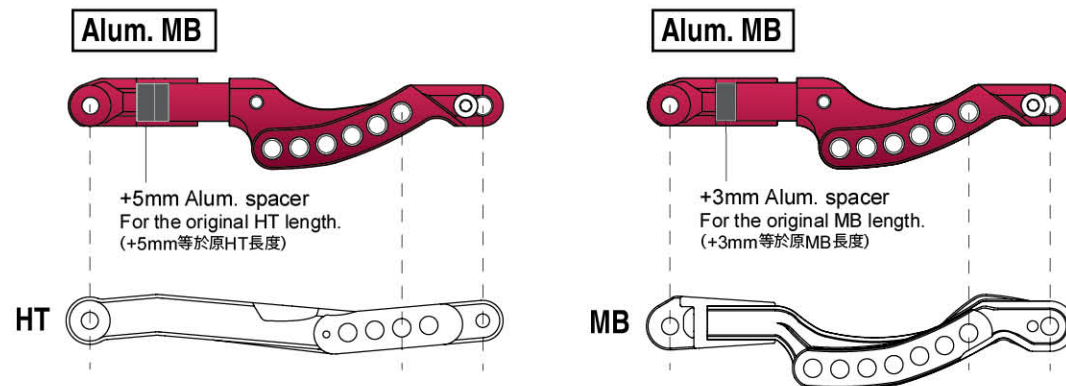


STEP 3 Wheel knuckle height adjustment

輪座高低調整

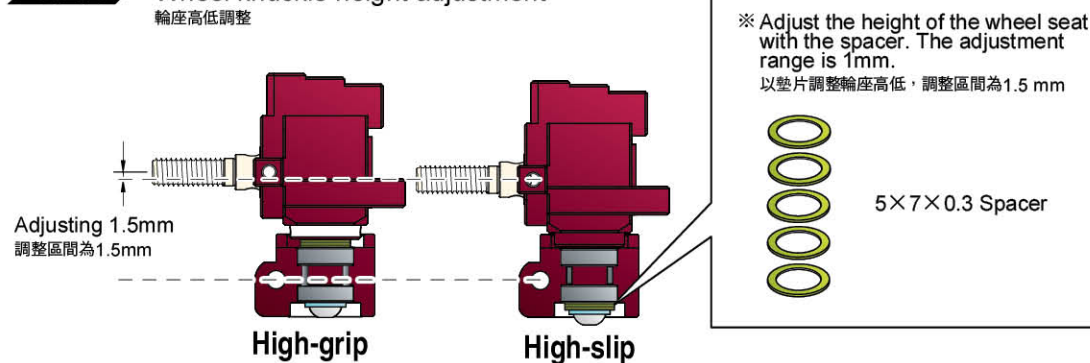


STEP 1 Front upper arm setting
前上擺臂設定

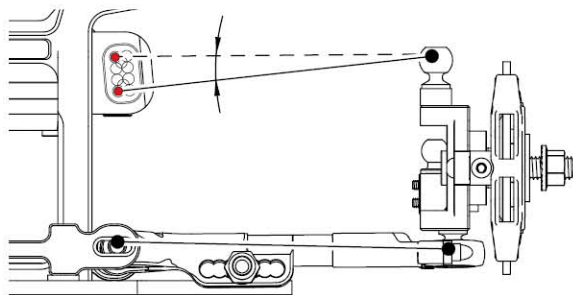


STEP 2 Rear caster angle setting
後傾角設定


standard setting 8°
3mm - 6° / 1mm - 10°
2mm - 8° / 0mm - 12°

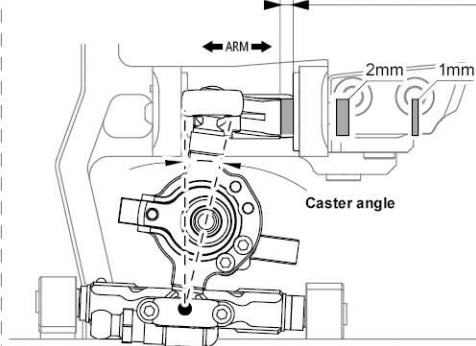


STEP 3 Steering setting
轉向設定

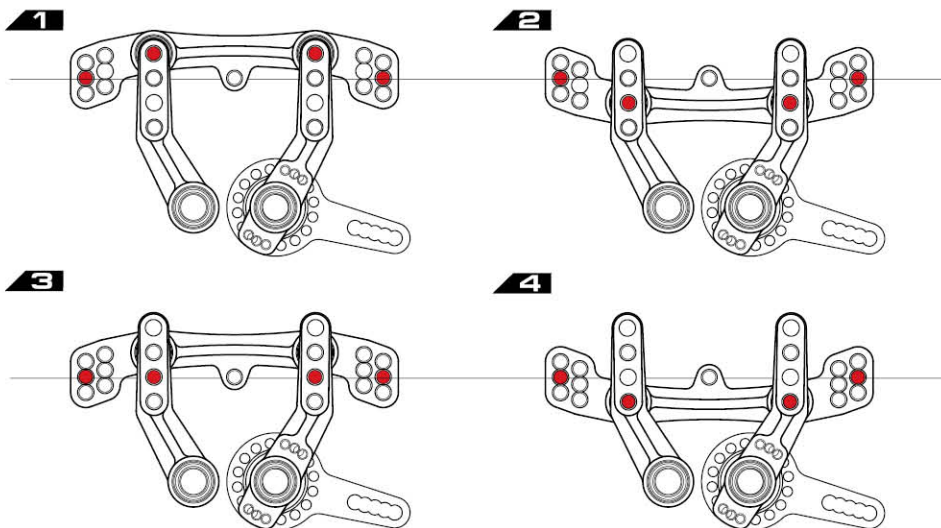


STEP 4 The steering joint plate highness adjustment instructions
轉向接頭高度調整說明





※ Please check every turnbuckle shaft length is correct before practice drive!
下場前請確認可調拉桿長度

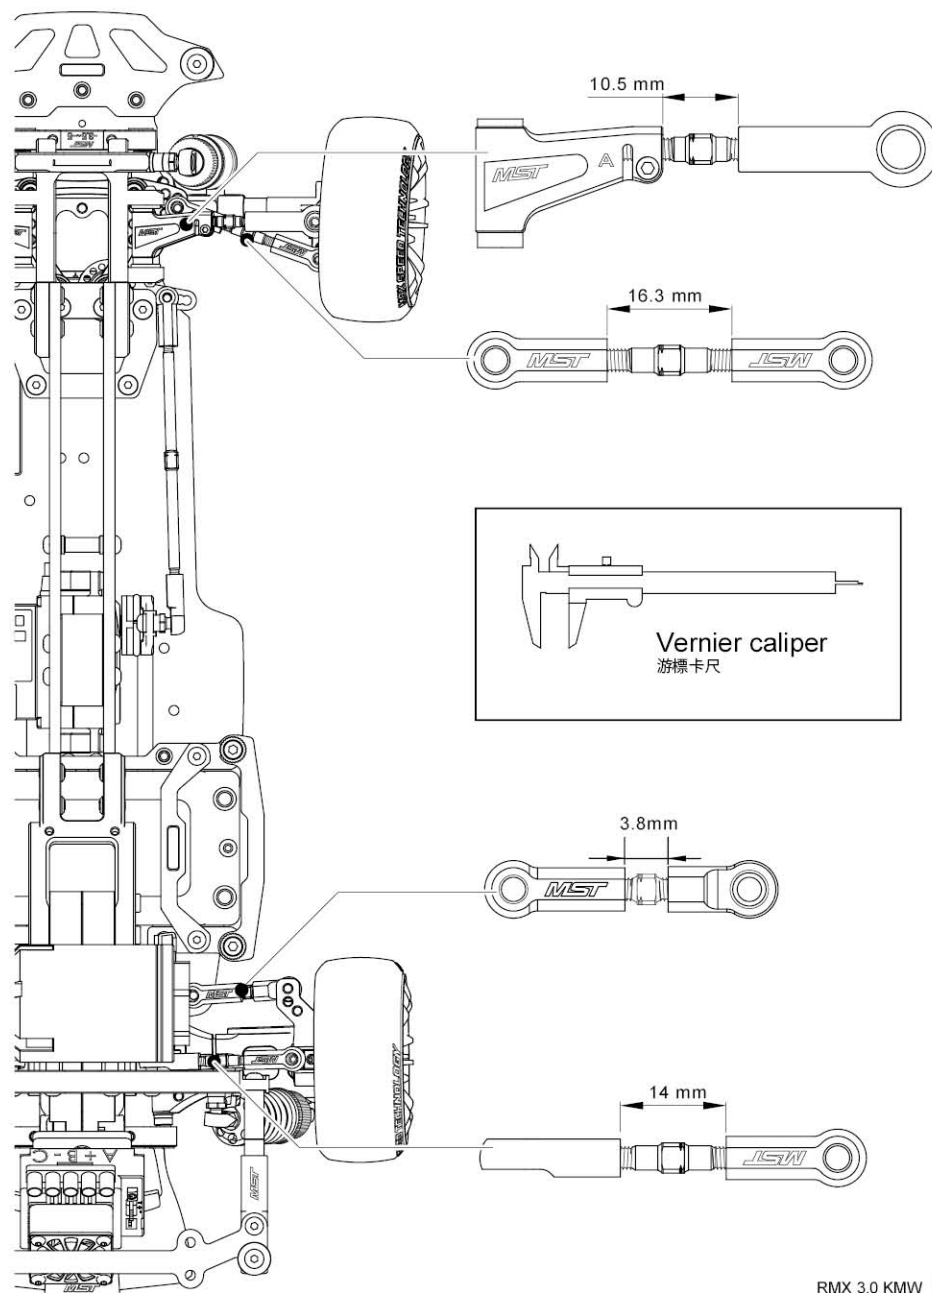


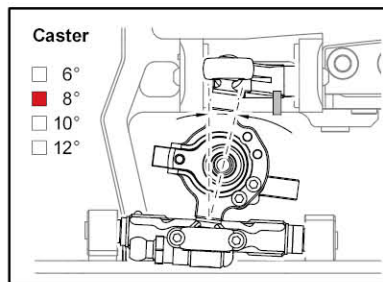


Steering

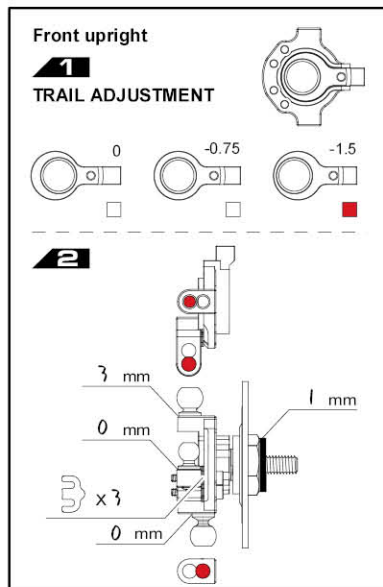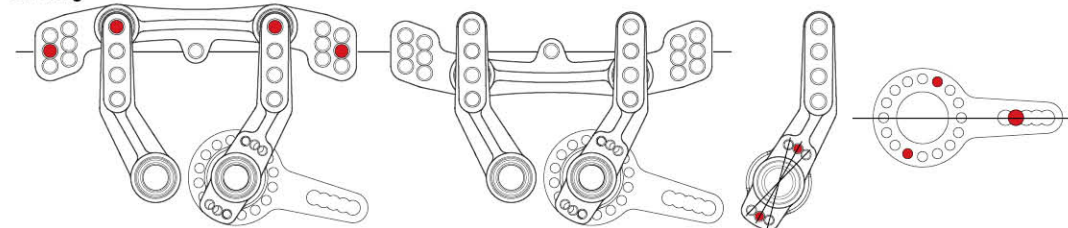


Front suspension

Camber: 5°
 Toe-in: -3.5°


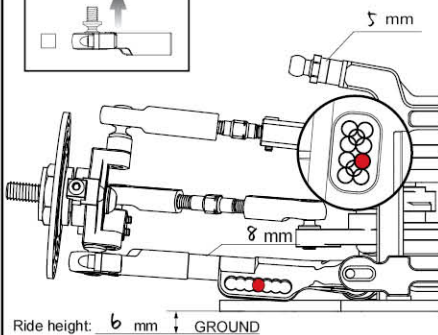
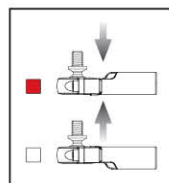


Rear suspension



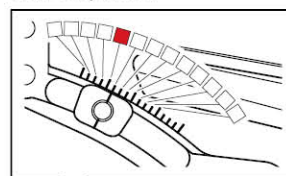


Camber: 2°
 Toe-in: 1°

Rear upright

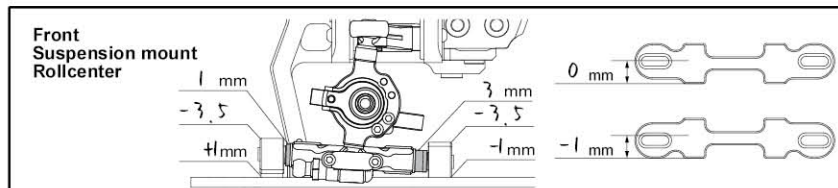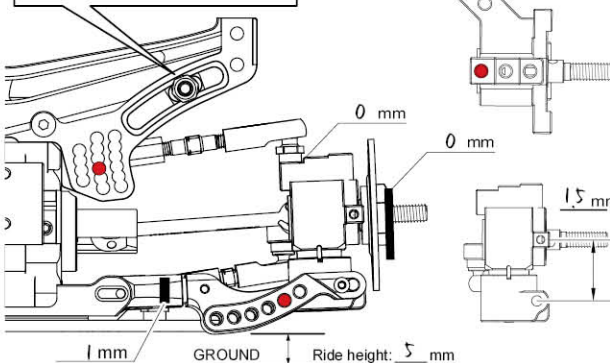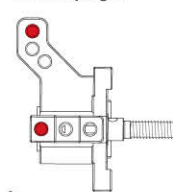

Rear Suspension mount Rollcenter

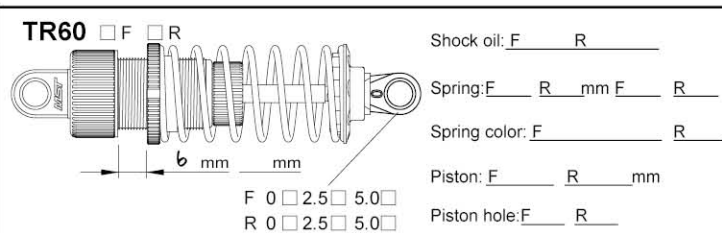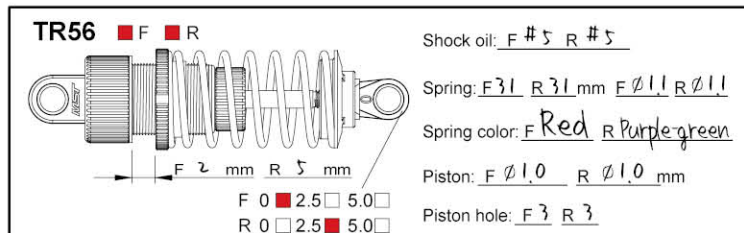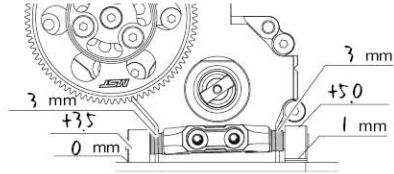

Mode



FRONT

Tire: CS-R

Silver

Wheel: GT

Offset: +5


REAR

Tire: CS-R

Silver

Wheel: GT

Offset: +5

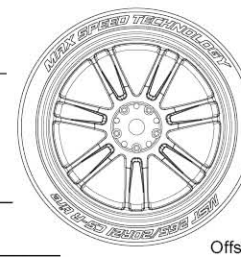

Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio

87 T ÷ 25 T × 3 = 10.44

Motor & ESC: 10.5T MC-970 Battery: LCG7.6V.120C

Transceiver: T7PX Gyro: LSDX Sensitivity: -20 ~ 0



Body Shell: _____

※ Please download the blank setup sheet at [www.rc-mst.com].

PARTS

Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

	M1.6x6 screw ×6 有頭螺絲 110066S		M3x3 (NL) screw ×2 止付螺絲 110035NL		2x9.8 Shaft ×5 插銷 110017		Steel ball 3.0 ×8 鋼珠 3.0 110020		3x5.5x1 Spacer ×11 墊片 820026BK
	M1.6x10 screw ×4 有頭螺絲 110105		M3x10 screw ×4 止付螺絲 110032		2x9.8 Shaft ×2 插銷 110046		2.5x5 Suspension balls ×8 插銷球頭 210321		3x5.5x2 Spacer ×8 墊片 820027BK
	M2x4 screw ×12 圓頭螺絲 110004		M3x12 screw ×4 止付螺絲 110056		2.6x25 Shaft ×2 插銷 310035		Cross joint ×2 連接軸 820030		3x5.5x3 Spacer ×6 墊片 820028BK
	M2x5 Screw ×2 圓頭螺絲 110050		M3x16 screw ×2 止付螺絲 110023		2x28 Shaft ×2 插銷 310103		M3x6x15 Alum. Post ×4 鋁合金支柱 820141		3x5.5x4 Spacer ×1 鋁墊片 820011BK
	M2x8 Screw ×2 圓頭螺絲 110063		M3x20 screw ×2 止付螺絲 110009		2.5x46 Arm shaft ×4 擺臂插銷 310048		Post 11.5 ×2 支柱 11.5 210593		3x5.5x7 Spacer ×7 墊片 820077BK
	M2x8 screw ×6 圓頭螺絲(半牙) 110045		M2.5x8 Screw ×4 沉頭螺絲 110116		4x21 Steel center shaft ×2 鋼製心軸 310119		Diff. spring ×1 滾差彈簧 310032		2.6x5.8x0.6 Spacer ×2 墊片 110080
	M2.5x8 Screw ×4 圓頭螺絲 110068		M3x5 screw ×3 沉頭螺絲 110041		Wheel axle ×2 萬向接杆 310065		Steel CVD great angle universal shaft 42 ×2 鋼製大角度CVD傳動軸 42 820004		3x6x0.5 Spacer ×16 墊片 110047
	M2.5x12 Screw ×4 圓頭螺絲 110065		M3x6 screw ×6 沉頭螺絲 110024		Alum. Lightweight 2WD axle ×2 輕量化鋁合金二驅輪軸 820139		4x6x0.3 Spacer ×4 墊片 820017		5x7x0.1 Spacer ×2 墊片 820018
	M3x6 screw ×22 圓頭螺絲 110001		M3x8 screw ×22 沉頭螺絲 110005		Alum. Main shaft 20T ×1 鋁合金主齒輪 20T 310118		5x7x0.3 Spacer ×12 墊片 820020		2.5x6 Thrust bearing ×1 止推培林 120008
	M3x8 screw ×22 圓頭螺絲 110002		M3x10 Screw ×16 沉頭螺絲 110052		M3x25 Steel turnbuckle ×2 鋼製可調拉桿 810029		5.8x4 Ball connector ×2 球頭螺絲 210159		3x7 Ball bearing ×4 培林 120006
	M3x10 screw ×7 圓頭螺絲 110026		M3x18 Screw ×2 沉頭螺絲 110078		M3x16 Alum. turnbuckle ×2 鋁製可調拉桿 810006BK		5.8x6 Ball connector (L) ×2 球頭螺絲 210625		4x8x3 Ball bearing ×2 培林 120013
	M3x12 screw ×2 圓頭螺絲 110029		M3x20 Screw ×2 沉頭螺絲 110101		M3x28 Alum. turnbuckle ×4 鋁製可調拉桿 810009BK		R-clip 5.0 ×6 R-銷 5.0 820075		4x10 Ball bearing ×2 培林 120018
	M3x14 screw ×2 圓頭螺絲 110061		M2.5x30 screw ×1 有頭螺絲(半牙) 110053		M3x32 Alum. turnbuckle ×1 鋁製可調拉桿 810010BK		Alum. wheel nut (black) (4) 鋁合金輪框螺帽 820001BK		5x8 Ball bearing ×14 培林 120003
	M3x16 screw ×3 圓頭螺絲 110086		M3x30 Screw ×1 有頭螺絲(半牙) 110100		M3x44 Alum. turnbuckle ×1 鋁製可調拉桿 810013BK		Wheel hub spacer 1.0 ×2 輪座墊片 1.0 820049BK		5x10 Ball bearing ×6 培林 120002
	4.8 Ball connector ×7 外六角球頭 210161		M3x40 Screw ×3 有頭螺絲(半牙) 110091		M3x84 Alum. turnbuckle ×1 鋁製可調拉桿 810037BK		Diff. plate ×2 滾差墊板 310033		10x15 Ball bearing ×2 培林 120001
	4.8 Ball connector L ×9 外六角球頭(長) 210344		Suspension mount spacer 0.5mm ×2 擺臂座墊片 0.5mm 820063BK						

PARTS

Please add color remark for () part number, e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK



RMX 2.0 Alum. steering arm
RMX 2.0 鋁合金轉向搖臂
210589BK



RMX 2.0 lightweight integrated front head mount
RMX 2.0 鋁合金輕量化一體式前機座
210645BK

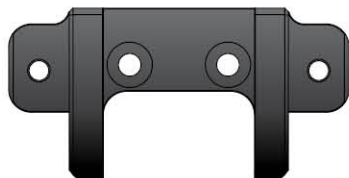

RMX 2.0 Alum. adj. front connect mount
RMX 2.0 鋁合金可調式前連結座組
210601BK




Alum. post 31.5
鋁合金支柱 31.5
210182BK



RMX 2.0 Alum. steering joint plate
RMX 2.0 鋁合金轉向連接板
210590BK



Alum. vertical low profile servo mount
鋁合金立式短型伺服機座
210222BK

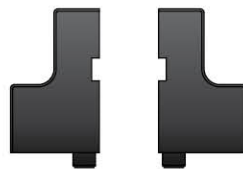


Alum. servo mount
鋁合金伺服機座
820125BK




Post 11.5
支柱 11.5
210593




Alum. steering arm mount
鋁合金搖臂架
210588BK

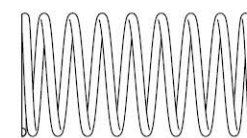

Soft coil spring 31mm × 2
(purple-green)
軟避震彈簧 31mm (紫綠)
820104-4

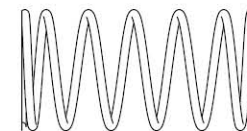

Hard coil spring 31mm (red) × 2
硬避震彈簧 (紅)
820103-4



Damper cylinder × 4
避震筒身
210151




Spring retainer × 4
避震調整環
310106BK



Damper cap × 4
避震器上蓋
310003BK




Rod guide cap × 4
避震器下蓋
310005BK



Piston rod × 4
避震軸心
310008



Alum. damper retainer × 4
鋁合金彈簧座
820050BK




Damper adjuster × 2
避震器拉桿
820055



Damper adjuster × 2
避震器拉桿
820055



Cylinder cap × 4
避震器上球頸
820055

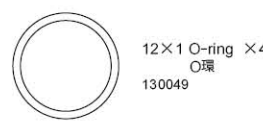

12×1 O-ring × 4
O環
130049




Oil seal × 4
避震器氣室
130004



E-clip 2.0 × 8
E扣 2.0
110013




Damper O-ring P3 × 4
避震器O環
130028



6.5×2 sponge × 4
泡棉
130021



Machined piston × 4
切削避震活塞
820071



Rod guide × 4
避震器下蓋墊片
210235

PARTS

Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)



ATK Alum. upright (2WD)
ATK 鋁合金輪座組
820123BK



Alum. antenna pipe mount
鋁合金天線管座
820066BK




MST-PVC Sticker X11
MST-PVC貼紙
710001




Adjustable alum. suspension mount (+3.5 - +5.0) X 2
可調式鋁合金擺臂座 (+3.5 - +5.0)
820143BK



Alum. 8-adjusting servo saver
鋁合金8段調整緩衝組
820127BK

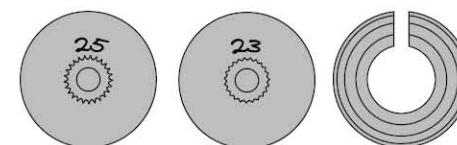


Universal servo saver set
通用型伺服緩衝組
820042

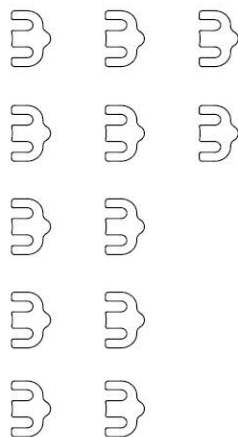

ATK Upright spacer X12
ATK 輪座墊片
820123-1




RMX 2.0 Alum. upper arm set
RMX 2.0 鋁合金上擺臂組
210575BK

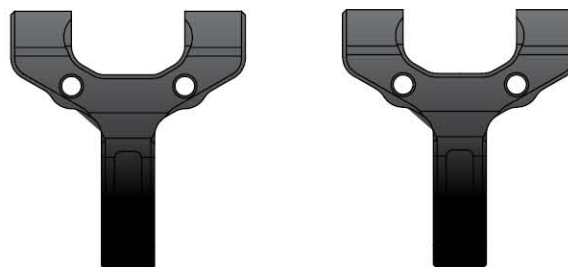

Alum. front lower arm set
鋁合金前下擺臂組
820117BK



Arm shaft bush set
擺臂插銷襯套組
210058W

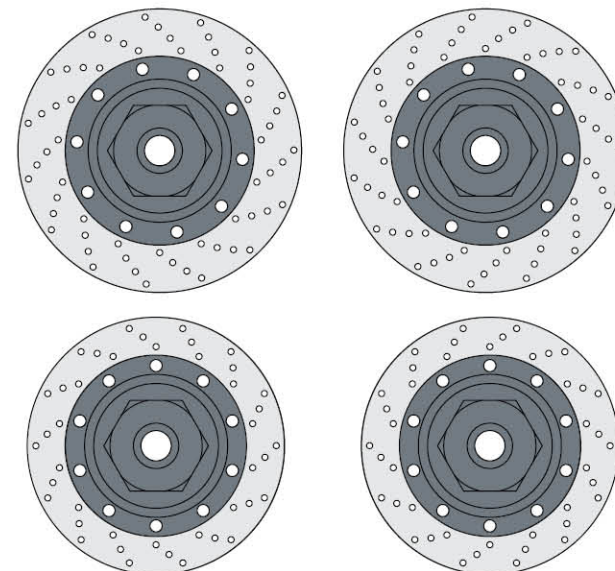


Alum. wheel hubs 6mm (large brake disc shaped)
鋁合金六角輪座6mm (加大煞車碟型)
210492

PARTS

Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R 為紅色 (210123)

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

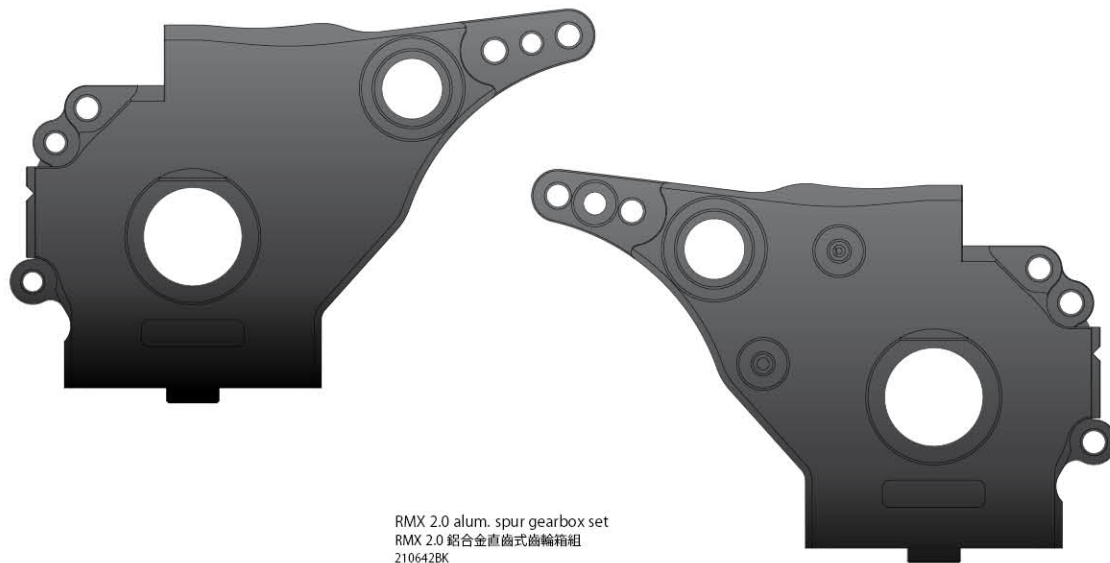


RMX 2.0 alum. spur gearbox set
RMX 2.0 鋁合金直齒式齒輪箱組
210642BK



RMX 2.0 alum. spur gearbox motor heat sink mount
RMX 2.0 鋁合金齒輪箱散熱馬達座
210643BK




RMX Alum. spur gear cover
RMX 鋁合金齒盤蓋板
210461BK

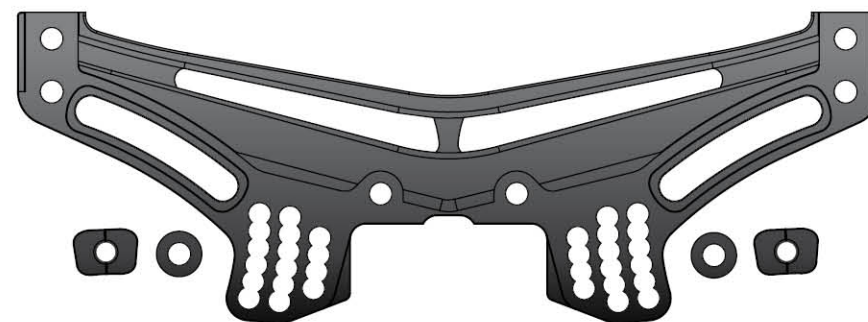

RMX 2.0 Alum. rear damper stay
RMX 2.0 鋁合金後避震架組
210578BK



RMX 2.0 alum. integrated upper deck connector
RMX 2.0 鋁合金一體式二樓板後連結架
210640BK

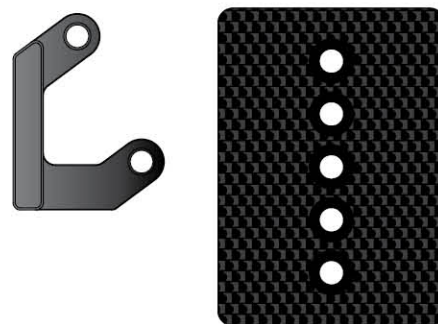


RMX 2.0 Alum.ESC rear moun set
RMX 2.0 鋁合金ESC後置架組
210639BK



Alum. Gyro mount
鋁合金陀螺儀座
210627BK




Alum. post M3×13 ×1
鋁合金支柱 M3×13
210561BK

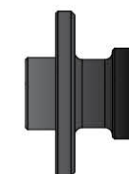


RMX Alum. spur gear holder
RMX 鋁合金齒盤座
210429BK

PARTS


Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)

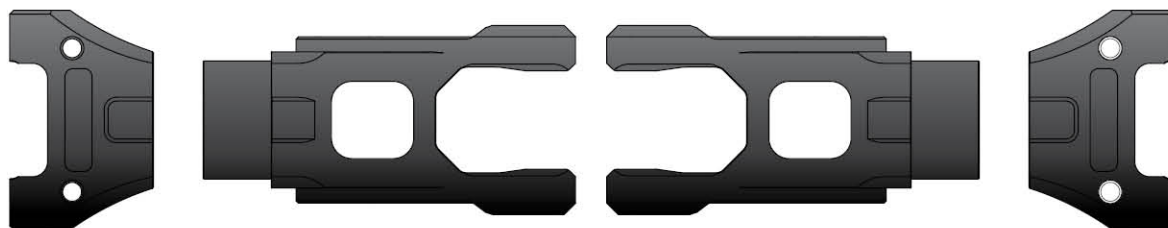

MB Alum. Rear lower arm set
MB 鋁合金後下擺臂
210616BK

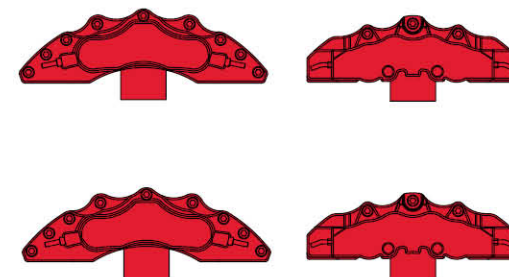


Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

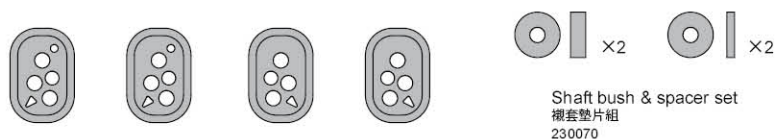

Shaft bush & spacer set
襯套墊片組
230070



5.8 Ball end bush
球頭襯套
820054

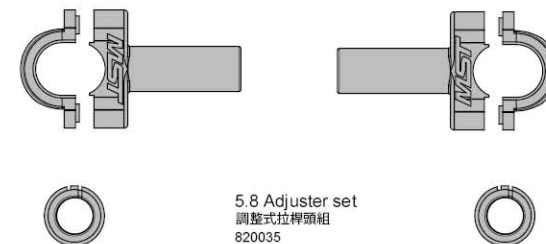


5.8 Adjuster set
調整式拉桿頭組
820035




4.8 Rod ends set (M/S) ×2
4.8 拉桿頭組 (M/S)
230067




Swing shaft protector
傳動軸軸套
210121-1



Reinforced adjuster set 4.8×18 ×2
強化拉桿頭組
210047



Reinforced adjuster set 5.8×26 ×2
強化拉桿頭組
210031

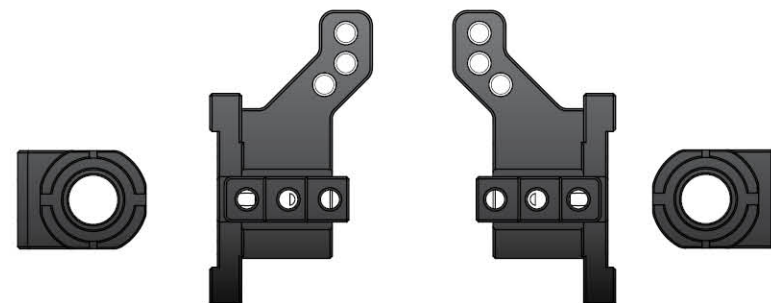


MB Alum. Rear upright set
MB 鋁合金後輪座組
210620BK


PARTS

Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

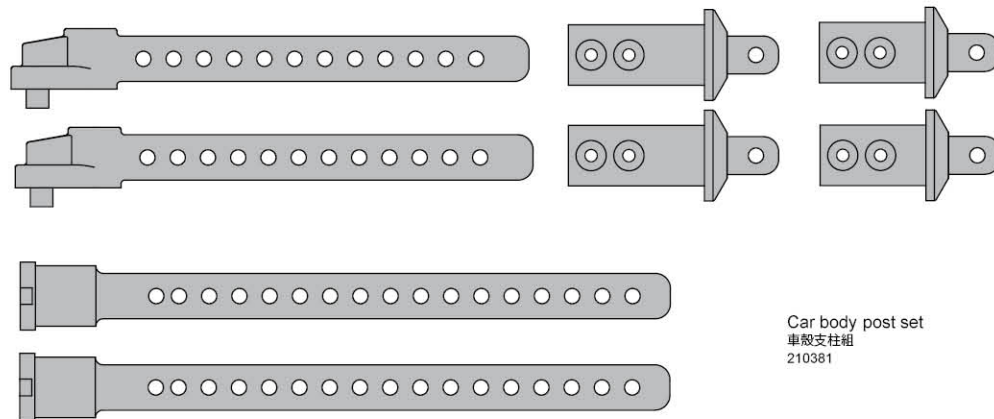

Car body post set
車殼支柱組
210381

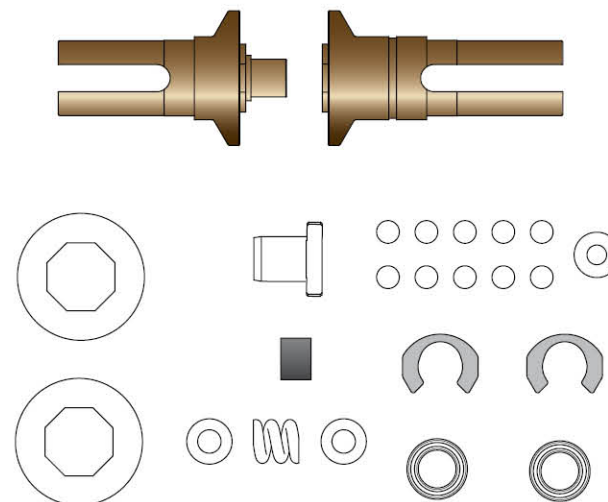


RMX 2.0 alum. spur gear ball diff. set
鋁合金直齒滾珠差速組
210644

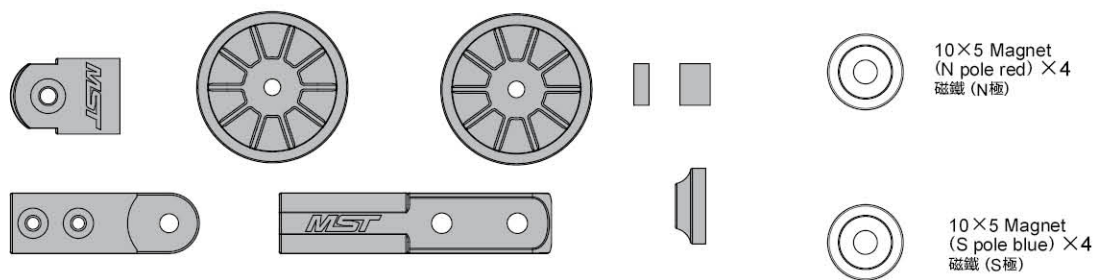


MST F/R Stealth Magnetic Body Post set
磁吸式前後隱形車殼固定組
820141

10×5 Magnet
(N pole red) ×4
磁鐵 (N極)

10×5 Magnet
(S pole blue) ×4
磁鐵 (S極)

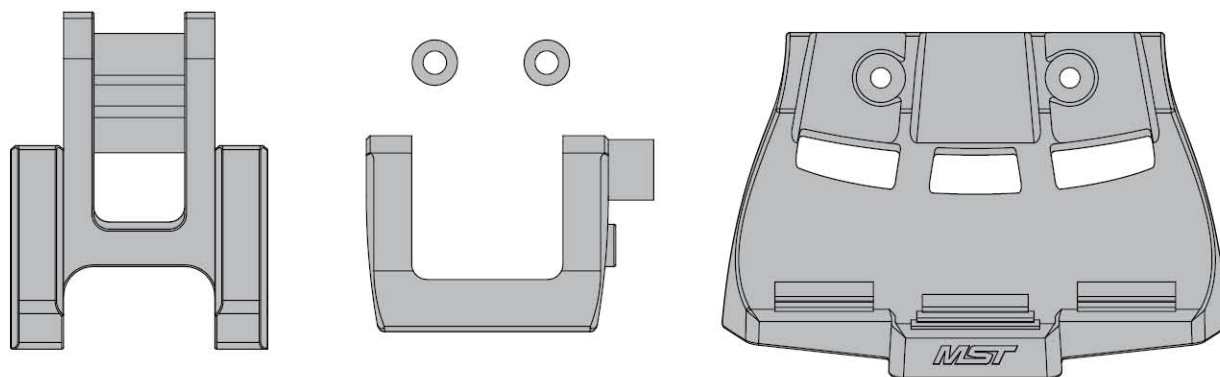


RMX 2.0 Rear motor conversion kit
RMX 2.0 後置套件組
210579

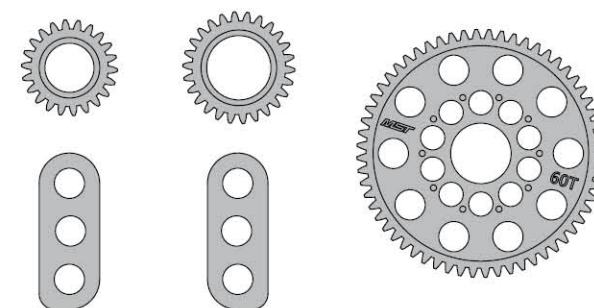


Idler gear set & ball diff. gear
惰輪組&滾珠差速齒
230135




Carbon lower bumper 3.0
碳纖維防撞板 3.0
210633

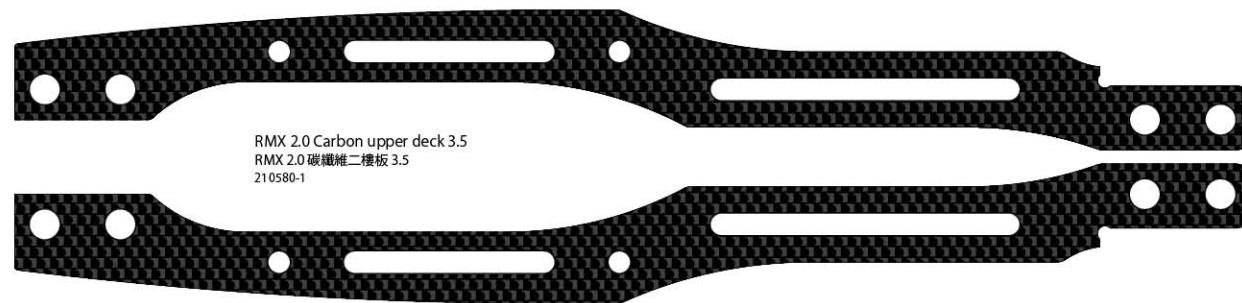


RMX 2.0 Carbon upper deck 3.5
RMX 2.0 碳纖維二樓板 3.5
210580-1

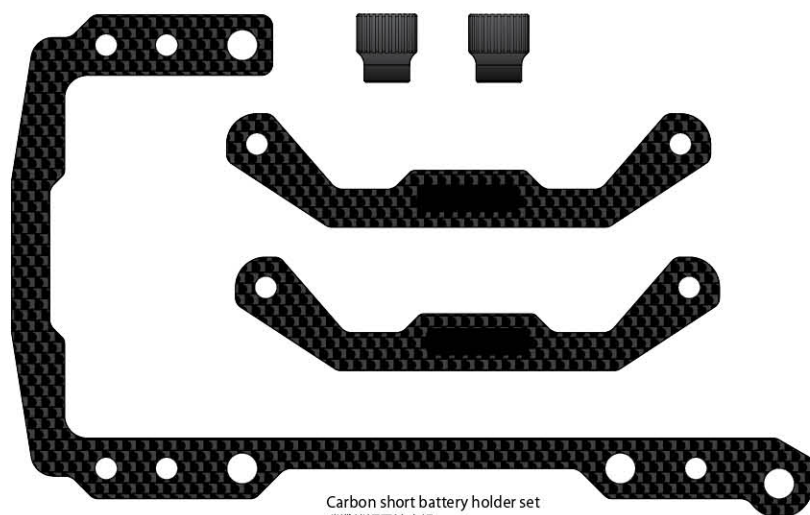

Carbon short battery holder set
碳纖維短電池座組
210637

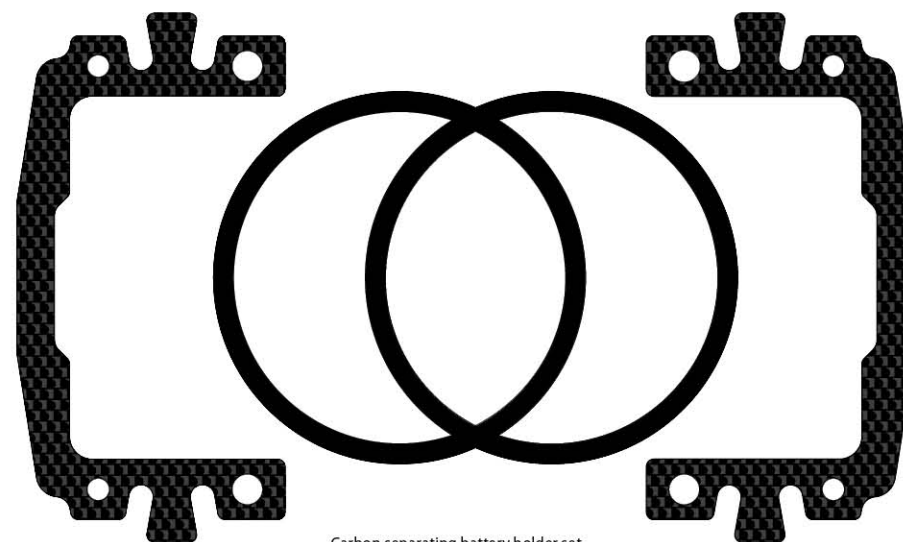

Carbon separating battery holder set
碳纖維分離式電池座組
210641

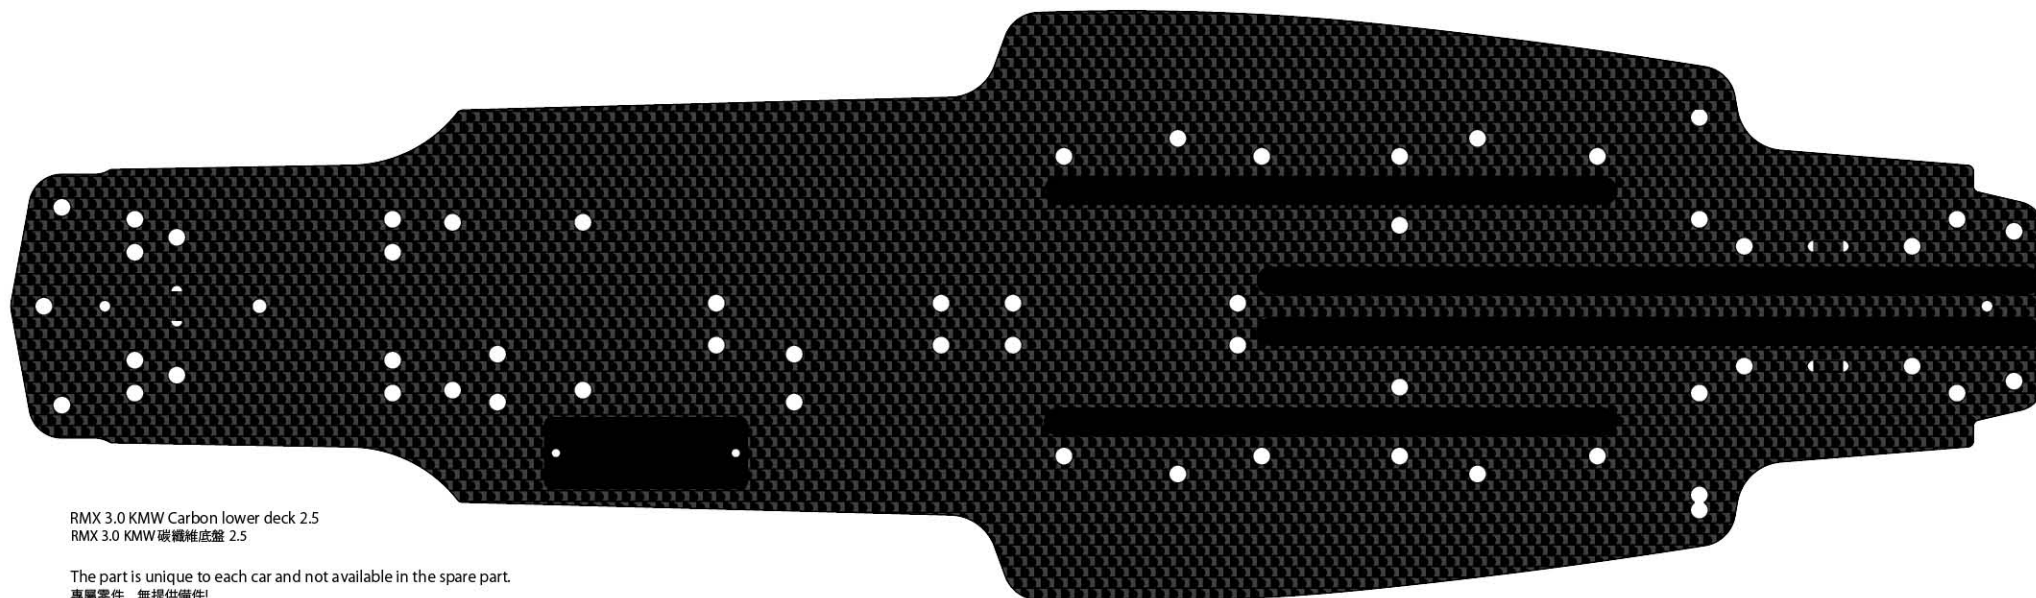


RMX 3.0 KMW Carbon lower deck 2.5
RMX 3.0 KMW 碳纖維底盤 2.5

The part is unique to each car and not available in the spare part.
專屬零件，無提供備件!



Alum. suspension mount (-3.5 - -5) X 2
鋁合金擺臂座 (-3.5 - -5)

The part is unique to each car and not available in the spare part.
專屬零件，無提供備件!

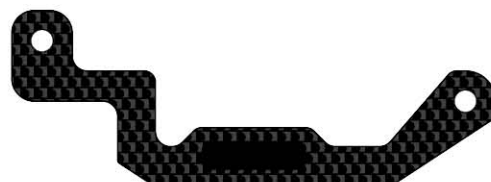


Carbon battery strap
碳纖維電池座壓板

The part is unique to each car and not available in the spare part.
專屬零件，無提供備件!



The part is unique to each car and not available in the spare part.
專屬零件，無提供備件!

Carbon holder fixing bar
碳纖維磁鐵座固定板

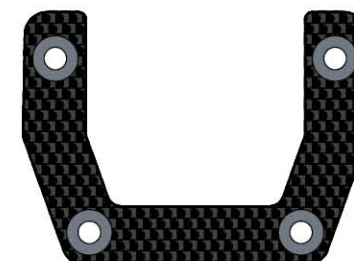

Carbon front connect mount
碳纖維前連結板

The part is unique to each car and not available in the spare part.
專屬零件，無提供備件!

PARTS CODE

110001	Round head screw M3×6 (10)	110086	Round head screw M3×16 (6)	210381	Car body post set	210644	RMX 2.0 alum. spur gear ball diff. set	820017	Spacer 4×6×0.3 (8)
110002	Round head screw M3×8 (10)	110091	Cap screw M3×40 (6)	210429	RMX Alum. spur gear holder	210645	RMX 2.0 lightweight integrated front head mount	820018	Spacer 5×7×0.1 (8)
110004	Round head screw M2×4 (6)	110100	Cap screw M3×30 (6)	210461	RMX Alum. spur gear cover			820020	Spacer 5×7×0.3 (8)
110005	Countersunk screw M3×8 (10)	110101	Countersunk screw M3×20 (6)	210492	Alum. wheel hubs 6mm (large brake disc shaped)	230067	4.8 Rod ends set (M/S)	820026	Alum. spacer 3×5.5×1.0 (5)
110009	Set screw M3×20 (6)	110105	Cap screw M1.6×10 (10)			230070	Shaft bush & spacer set	820027	Alum. spacer 3×5.5×2.0 (5)
110013	E-clip 2.0 (10)	110116	Countersunk screw M2.5×8 (6)	210510CR	Enlarged brake calipers (red) (4)	230135	Idler gear set & ball diff. gear	820028	Alum. spacer 3×5.5×3.0 (5)
110017	Shaft 2×9.8 (10)	120001	Ball bearing 10×15 (4)	210561	Alum. post M3×13 (2)	310001	Ball connector 4.8×4.5 (5)	820030	Cross joint (2)
110020	Steel ball 3.0 (13)	120002	Ball bearing 5×10 (4)	210575	RMX 2.0 Alum. upper arm set	310003	Cylinder cap (2)	820035	Adjuster set 5.8 (2)
110023	Set screw M3×16 (6)	120003	Ball bearing 5×8 (4)	210578	RMX 2.0 Alum. rear damper stay	310005	Rod guide cap (2)	820042	Universal servo saver set
110024	Countersunk screw M3×6 (10)	120006	Ball bearing 3×7 (2)	210579	RMX 2.0 Rear motor conversion kit	310008	Piston rod (4)	820046	Alum. damper retainer (lower type) (4)
110026	Round head screw M3×10 (10)	120008	Thrust bearing 2.5×6	210580-1	RMX 2.0 Carbon upper deck 3.5	310032	Diff. screw & spring set	820049	Wheel hub spacer 1.0 (4)
110029	Round head screw M3×12 (6)	120013	Ball bearing 4×8×3 (2)	210588	Alum. steering arm mount	310033	Diff. plate (2)	820054W	5.8 Ball end bush (white)
110032	Set screw M3×10 (6)	120018	Ball bearing 4×10×4 (2)	210589	RMX 2.0 Alum. steering arm	310035	Lower arm shaft 2.6×22&25 (each one pair)	820055	Reinforced damper plastic maintenance set (4)
110035NL	Set screw M3X3 (NL) (7)	130004	Oil seal (4)	210590	RMX 2.0 Alum. steering joint plate	310048	Arm shaft 2.5×46 (4)	820063	Suspension mount spacer 0.5mm (4)
110041	Countersunk screw M3×5 (10)	130021	Sponge 6.5×2 (10)	210593	Post 11.5 (2)	310050	Ball connector 4.8×6 (5)	820066	Alum. antenna pipe mount
110045	Round head screw M2×8 (partial thread) (6)	130028	Damper O-ring P3 (blue) (10)	210601	RMX 2.0 Alum. adj. front connect mount	310065	Wheel axle (2)	820071	Machined piston 3×1.0 (4)
110046	Shaft 2×9.8 (8)	130049	O-ring 12×1 (4)	210616	MB Alum. Rear lower arm set	310103	Arm shaft 2×28 (2)	820075	R-clip 5.0 (10)
110047	Spacer 3×6×0.5 (8)	210031	Reinforced adjuster set 5.8×26	210620	MB Alum. Rear upright set	310106	Spring retainer (2)	820077	Alum. spacer 3×5.5×7 (2)
110050	Round head screw M2×5 (6)	210047	Reinforced adjuster set 4.8×18 (8)	210625	Ball connector L 5.8×6 (4)	310118	Alum. main shaft 48P 20T	820103-4	31mm Hard coil spring (super-soft) (2)
110052	Countersunk screw M3×10 (10)	210068W	Arm shaft bush set (white)	210627	Alum. Gyro mount	310119	4×21 Steel center shaft (2)	820104-4	31mm Soft coil spring (super-soft) (2)
110053	Cap screw M2.5×30 (2)	210121-1	Swing shaft protector (4)	210633	Carbon lower bumper 3.0	710001	MST-PVC Sticker (4)	820117	Alum. front lower arm set
110056	Set screw M3×12 (6)	210151	Alum. damper cylinder (4)	210637	Carbon short battery holder set	810006	Alum. reinforced turnbuckle 3×16 (2)	820123	ATK Alum. upright (2WD)
110061	Round head screw M3×14 (6)	210159	Ball connector 5.8×4 (4)	210639	RMX 2.0 Alum.ESC rear moun set	810009	Alum. reinforced turnbuckle 3×28 (2)	820125	Alum. servo mount
110063	Round head screw M2×8 (6)	210161	Ball connector nut 4.8 (4)	210640	RMX 2.0 alum. integrated upper deck connector	810010	Alum. reinforced turnbuckle 3×32 (2)	820123-1	ATK Upright spacer (20)
110065	Round head screw M2.5×12 (6)	210182	Alum. post 31.5 (blue) (2)			810013	Alum. reinforced turnbuckle 3×44 (2)	820127	Alum. 8-adjusting servo saver
110066S	Cap screw M1.6×6 (10)	210222	Alum. vertical low profile servo mount	210641	Carbon separating battery holder set	810029	Steel reinforced turnbuckle 3×25 (2)	820139	Alum. Lightweight 2WD axle (2)
110068	Round head screw M2.5×8 (6)	210235	Piston spacer set	210642	RMX 2.0 alum. spur gearbox set	810037	Alum. reinforced turnbuckle 3×84	820141	MST F/R Stealth Magnetic Body Post set
110078	Countersunk screw M3×18 (6)	210321	Suspension balls 2.5×5 (8)	210643	RMX 2.0 alum. spur gearbox motor	820001	Alum. wheel nut (4)	820143	Adjustable alum. suspension mount (+3.5~+5.0) (red)
110080	Spacer 2.6×5.8×0.6 (8)	210344	Ball connector nut L 4.8 (4)			820004	Steel CVD great angle universal shaft 42 (2)		

部品編號

110001	六角半圓頭螺絲 M3×6 (10)	110080	墊片 2.6×5.8×0.6 (8)	210321	插銷球頭 2.5×5 (8)	210644	RMX 2.0 鋁合金直齒滾珠差速組	820017	墊片 4×6×0.3 (8)
110002	六角半圓頭螺絲 M3×8 (10)	110086	六角半圓頭螺絲 M3×16 (6)	210344	球頭螺帽 L 4.8 (4)	210645	RMX 2.0 鋁合金輕量化一體式前推座	820018	墊片 5×7×0.1 (8)
110004	六角半圓頭螺絲 M2×4 (6)	110091	六角有頭螺絲 M3×40 (半牙) (6)	210381	車殼支柱組	230067	4.8 拉桿頭組 (M/S)	820020	墊片 5×7×0.3 (8)
110005	六角沉頭螺絲 M3×8 (10)	110100	六角有頭螺絲 M3×30 (半牙) (6)	210429	RMX 鋁合金齒盤座	230070	襯套墊片組	820026	鋁墊片 3×5.5×1.0 (紅) (5)
110009	六角止付螺絲 M3×20 (6)	110101	六角沉頭螺絲 M3×20 (6)	210461	RMX 鋁合金齒盤壓板	230135	惰輪組&滾珠差速齒	820027	鋁墊片 3×5.5×2.0 (5)
110013	E扣 2.0 (10)	110105	六角有頭螺絲 M1.6×10 (10)	210492	鋁合金六角輪座6mm (加大煞車碟型)	310001	內六角公球頭 4.8×4.5 (5)	820028	鋁墊片 3×5.5×3.0 (5)
110017	插銷 2×9.8 (10)	110116	六角沉頭螺絲 M2.5×8 (6)	210510CR	加大煞車卡鉗 (紅) (4)	310003	避震器上蓋 (2)	820030	連接軸 (2)
110020	差速鋼珠 3.0 (13)	120001	培林 10×15 (4)	210561	鋁合金支柱 M3×13 (2)	310005	避震器下蓋 (2)	820035	調整式拉桿頭組 5.8 (2)
110023	六角止付螺絲 M3×16 (6)	120002	培林 5×10 (4)	210575	RMX 2.0 鋁合金上擺臂組	310008	避震軸心 (4)	820042	通用型伺服緩衝組
110024	六角沉頭螺絲 M3×6 (10)	120003	培林 5×8 (4)	210578	RMX 2.0 鋁合金後避震架組	310032	滾差彈簧螺絲組	820046	鋁合金彈簧座 (降低型) (4)
110026	六角半圓頭螺絲 M3×10 (10)	120006	培林 3×7 (2)	210579	RMX 2.0 後置套件組	310033	滾差壓板 (2)	820049	輪座墊片 1.0 (4)
110029	六角半圓頭螺絲 M3×12 (6)	120008	止推培林 2.5×6	210580-1	RMX 2.0 碳纖維二樓板 3.5	310035	下擺臂插銷 2.6×22&25 (各一對)	820054W	5.8 球頭襯套 (白)
110032	六角止付螺絲 M3×10 (6)	120013	培林 4×8×3 (2)	210588	鋁合金搖臂架	310048	擺臂插銷 2.5×46 (4)	820055	強化避震膠件包 (4)
110035NL	六角止付螺絲 M3×3 (耐落) (6)	120018	培林 4×10×4 (2)	210589	RMX 2.0 鋁合金轉向搖臂	310050	內六角公球頭 4.8×6 (5)	820063	擺臂座墊片 0.5mm (4)
110041	六角沉頭螺絲 M3×5 (10)	130004	避震氣室 (4)	210590	RMX 2.0 鋁合金轉向連接板	310065	萬向接杆 (2)	820066	鋁合金天線管座
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130021	泡棉 6.5×2 (10)	210593	支柱 11.5 (2)	310103	擺臂插銷 2×28 (2)	820071	切削避震活塞 3×1.0 (4)
110046	插銷 2×9.8 (剖溝) (8)	130028	阻尼器O環 P3 (藍) (10)	210601	RMX 2.0 鋁合金可調式前連結座組	310106	避震調整環 (2)	820075	R銷 5.0 (10)
110047	墊片 3×6×0.5 (8)	130049	O環 12×1 (4)	210616	MB 鋁合金後下擺臂	310118	鋁合金主齒軸 48P 20T	820077	鋁墊片 3×5.5×7 (2)
110050	六角半圓頭螺絲 M2×5 (6)	210031	強化拉桿頭組 5.8×26	210620	MB 鋁合金後輪座組	310119	4×21 鋼製心軸 (2)	820103-4	31mm 硬避震彈簧 (超軟) (2)
110052	六角沉頭螺絲 M3×10 (10)	210047	強化拉桿頭組 4.8×18 (8)	210625	球頭螺絲 L 5.8×6 (4)	710001	MST-PVC 貼紙 (4)	820104-4	31mm 軟避震彈簧 (超軟) (2)
110053	六角有頭螺絲 M2.5×30 (半牙) (2)	210068W	擺臂插銷襯套組 (白)	210627	鋁合金陀螺側底座	810006	鋁合金強化可調拉桿 3×16 (2)	820117	鋁合金前下擺臂組
110056	六角止付螺絲 M3×12 (6)	210121-1	傳動軸軸套 (4)	210633	碳纖維防撞板 3.0	810009	鋁合金強化可調拉桿 3×28 (2)	820123	ATK 鋁合金輪座組
110061	六角半圓頭螺絲 M3×14 (6)	210151	鋁合金避震筒身 (4)	210637	碳纖維短電池座組	810010	鋁合金強化可調拉桿 3×32 (2)	820125	鋁合金伺服機座
110063	六角半圓頭螺絲 M2×8 (6)	210159	球頭螺絲 5.8×4 (4)	210639	RMX 2.0 鋁合金ESC後置架組	810013	鋁合金強化可調拉桿 3×44 (2)	820123-1	ATK 輪座墊片 (20)
110065	六角圓頭螺絲 M2.5×12 (6)	210161	球頭螺帽 4.8 (4)	210640	RMX 2.0 鋁合金一體式二樓板後連結架	810029	鋼製強化可調拉桿 3×25 (2)	820127	鋁合金8段調整緩衝組
110066S	六角有頭螺絲 M1.6×6 (10)	210182	鋁合金支柱 31.5 (藍) (2)	210641	碳纖維分離式電池座組	810037	鋁合金強化可調拉桿 3×84	820139	輕量化鋁合金二驅輪軸 (2)
110068	六角圓頭螺絲 M2.5×8 (6)	210222	鋁合金立式短型伺服機座 (紅)	210642	鋁合金輪框螺帽 (4)	820001	磁吸式前後隱形車殼固定組	820141	
110078	六角沉頭螺絲 M3×18 (6)	210235	避震器活塞墊片組	210643	RMX 2.0 鋁合金直齒箱散熱馬達座	820004	鋼製大角度CVD傳動軸 42 (2)	820143	可調式鋁合金擺臂座 (+3.5~+5.0) (紅) 026228